

Marlon 350E Auto Crimper

Service Manual



Provided By

MyBinding.com®
When Image Matters.

MARLON 350E AUTO CRIMPER



SERVICE MANUAL

INTRODUCTION


Your new Marlon 350 Auto Crimper is designed to increase your plastic spiral binding production. The Marlon 350 is an inexpensive yet extremely versatile tabletop machine. The Marlon 350 cuts and crimps 6mm through 50mm coil, with an adjustable binding length from 3.5-inches to 14-inches. The Marlon 350 is capable of 50 cycles per minute, and features a coil waste chute that uses standard plastic grocery bags for clipping waste containment. The Marlon 350 is an operator friendly machine that is easy to set up, allowing for quick changeover from one coil diameter to another. We are confident that your new Marlon 350 Auto Crimper will be a valuable asset to your plastic coil binding operation.

The following pages of this manual will cover machine setup, operating procedures, and trouble shooting your Marlon 350 Auto Crimper.



WARNING: *Changing of cutting blades should be done only by trained service personnel. Disconnect power from unit before servicing.*

MARLON 350E CONNECTIONS

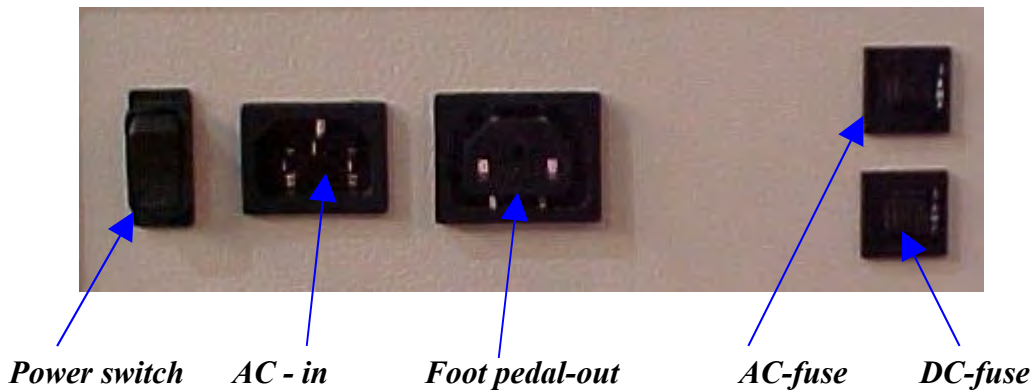

COIL WASTE CHUTE



PLACE BAG
HANDLES IN
THESE SLOTS
TO HOLD BAG

THE COIL WASTE CHUTE USES STANDARD PLASTIC GROCERY BAGS FOR CLIPPING CONTAINMENT. PLACE THE HANDLES OF THE BAG IN THE SLOTS ON BOTH SIDES TO HOLD THE BAG IN PLACE.

BLADE SELECTION

The Marlon 350 Auto Crimper features interchangeable cutter blades. Your Marlon 350 was shipped with the B-size cutter blades installed. Use the following chart to determine what blade size is required for the coil diameter your crimping.

A-size blades: 6mm and 7mm coil

Note: Over sized punch patterns (.248) or punch patterns with a large backstop (distance from paper edge to hole) will not work well with the A – size cutter head.

B-size blades: 8mm through 25mm coil


C-size blades: 12mm through 50mm coil

The cutter blades and cutter head assemblies have been color coded to reduce the chance of improper assembly.

- 1.) **Universal parts** of the cutter head assembly that are used for all three sets of knives are **marked white**. These parts are used all of the time.
- 2.) **A-size parts** of the cutter assembly are **marked red**.
- 3.) **B-size parts** of the cutter assembly are **marked green**.
- 4.) **C-size parts** of the cutter assembly are **marked yellow**.


Note: Some parts of the cutter assembly are marked with two colors. These parts are used on two of the three cutter assembly configurations.

CUTTER HEAD ASSEMBLY

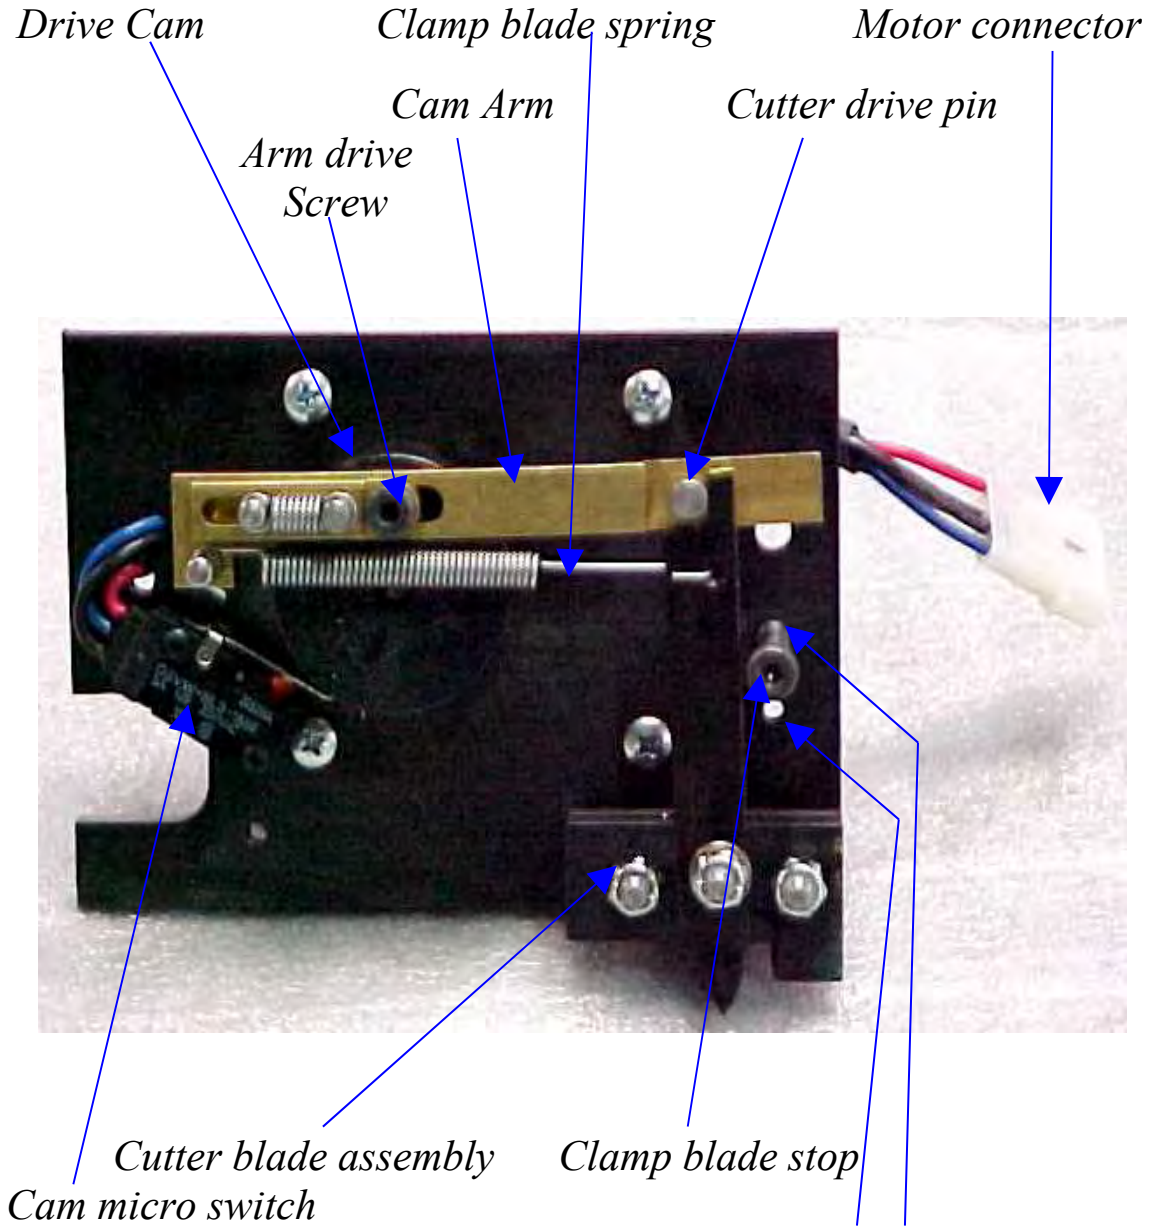


Clamp blade stop mtg. holes 1, 2_
Hole # 1, will provide a wider blade gap
Suitable for larger coil / filament
Hole # 2 accommodates smaller coils /
Filament size

B-SIZE CUTTER BLADE ASSEMBLY

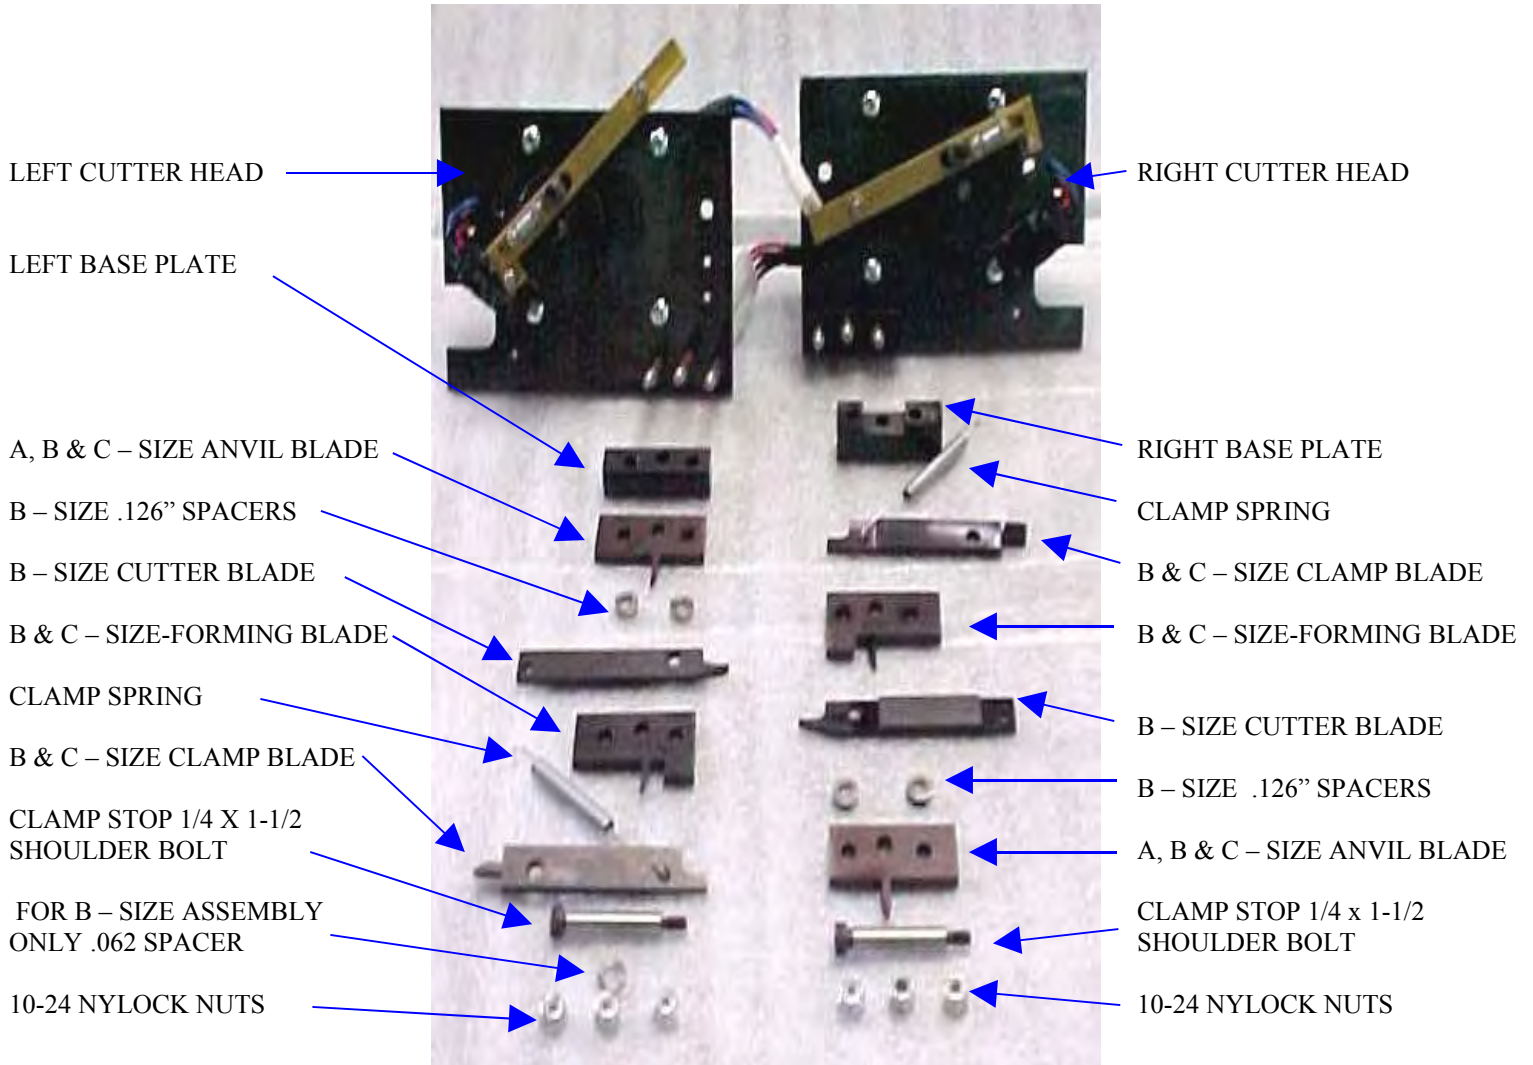

NOTE: THE RIGHT CUTTER BLADE ASSEMBLY IS UP SIDE DOWN. THE SAME FOUR BLADES ARE USED ON BOTH SIDES, BUT THEY ARE INSTALLED IN EXACTLY THE OPPOSITE ORDER.

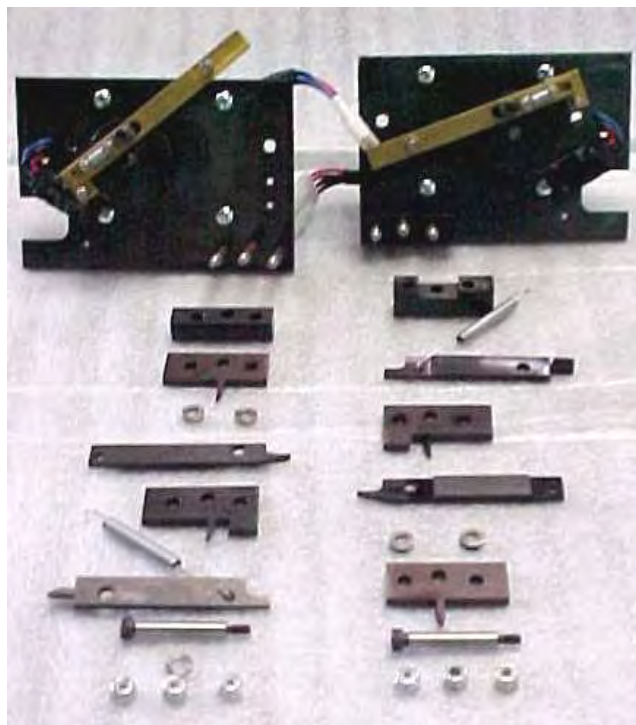


Pictured above is the B-size cutter blade assembly. The following information describes the changes needed to switch from the B to A-size and B to C-size cutter assemblies. Refer to the color codes on page four to select the proper parts when changing from one blade configuration to another. Refer to pages five and six for part descriptions.

Changing from B to A-size blades:

- 1.) Disconnect the power cord from Marlon 350.*
- 2.) Remove the top cover from the machine.*
- 3.) Remove the clamp stop shoulder bolts from each side*
- 4.) Remove the three 10-24 nylock nuts from each side.*
- 5.) The left clamp blade is now free and can be removed.*
- 6.) Remove the right anvil blade by lifting it straight up.*
- 7.) Remove the left forming blade by lifting it straight up.*
- 8.) Detach the right cutter blade from the drive pin. (the right cutter blade is now free.)*
- 9.) Remove the two .126" B-size spacers from each side.*
- 10.) Remove the right forming blade by lifting it straight up. The right clamp blade is now free.*
- 11.) Detach the left cutter blade from the drive pin, the arm drive screw must be loosened to free cutter blade. (See step 8 for details.)*
- 12.) Leave the left anvil blade on, because it's used in all three setups.*
- 13.) Reassemble the cutter blade assemblies in reverse order using the correct color-coded parts.*
- 14.) Use the fifth .094" A-size spacer instead of .062 spacer on the left hand shoulder bolt.*

A-KIT COIL GUIDE INSTALLATION

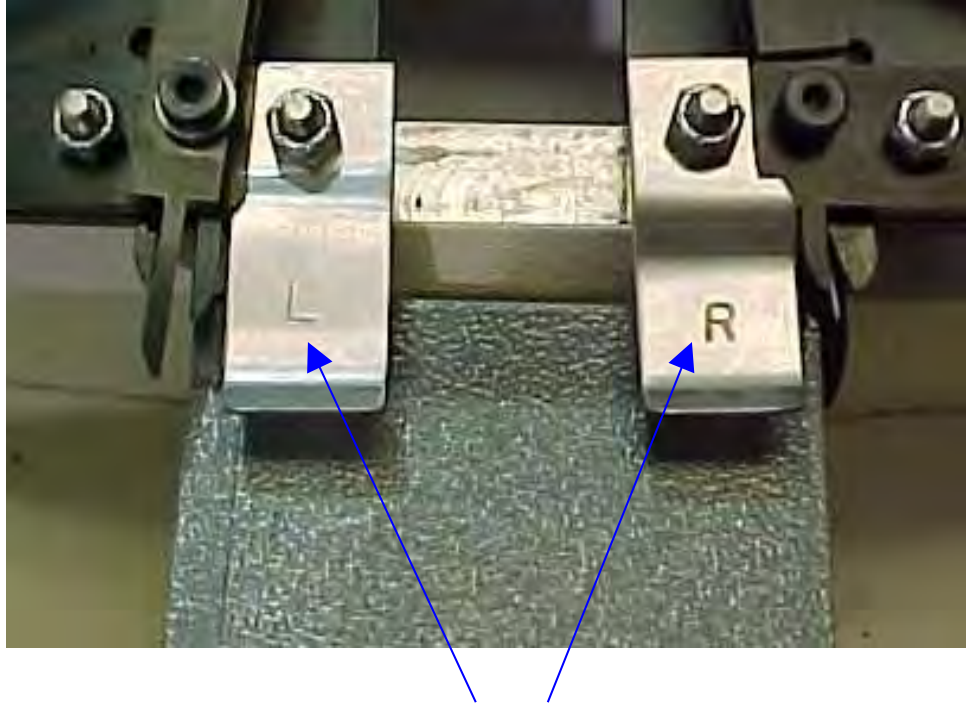

PICTURED ABOVE ARE THE COIL GUIDES INSTALLED ON THE CUTTER ASSEMBLY. THESE GUIDES ARE ONLY USED WITH THE A-SIZE BLADE CONFIGURATION. THE COIL GUIDES ARE STAMPED "L" FOR LEFT AND "R" FOR RIGHT AND ARE ALWAYS INSTALLED WITH THE LETTERS UP. YOU HAVE TWO "L" GUIDES ONE MARKED "L" AND ONE MARKED "L 6". THE "L 6" IS USED FOR 6mm DIA. COILS ONLY.

Changing from B to C-size blades:

- 1.) Disconnect the power cord from Marlon 350.*
- 2.) Remove top cover from machine.*
- 3.) Remove the clamp stop shoulder bolts on both sides.*
- 4.) Remove the three 10-24 nylock nuts from each side.*
- 5.) The left clamp blade is now free and can be removed.*
- 6.) Remove the right anvil blade by lifting it straight up.*
- 7.) Remove the left forming blade by lifting it straight up.*
- 8.) Detach the right cutter blade from the drive pin. (The right cutter blade is now free.)*
- 9.) Remove the two .126" B-size spacers from each side.*
- 10.) Remove the right forming blade by lifting it straight up. The right clamp blade is now free.*
- 11.) Detach the left cutter blade from the drive pin, the arm drive screw must be loosened to free cutter blade (See step 8 for details.)*
- 12.) Leave the left anvil blade on, because it is used in all three setups.*
- 13.) Change the clamp stop to its correct hole position.*
- 14.) Reassemble the cutter blade assemblies in reverse order using the correct color-coded parts.*
- 15.) **Note:** No washers or spacer is used on the left-hand shoulder bolt when using the C-size blade configuration.*

C-CUTTER BLADE INSTALLATION




**REAR HOLE OF THE
C-CUT BLADE IS
NOT USED IN THIS
MODEL.**

**IN YOUR "C" KIT
THIS HOLE IS
PLUGGED.**

**INSTALL THE DRIVE
PIN IN THE OPEN
HOLE.**

***PICTURED ABOVE ARE THE C-SIZE CUTTER BLADES AS
FURNISHED IN THE "C" KIT SHIPPED WITH YOUR
MACHINE.***

CLAMP STOP POSITIONS

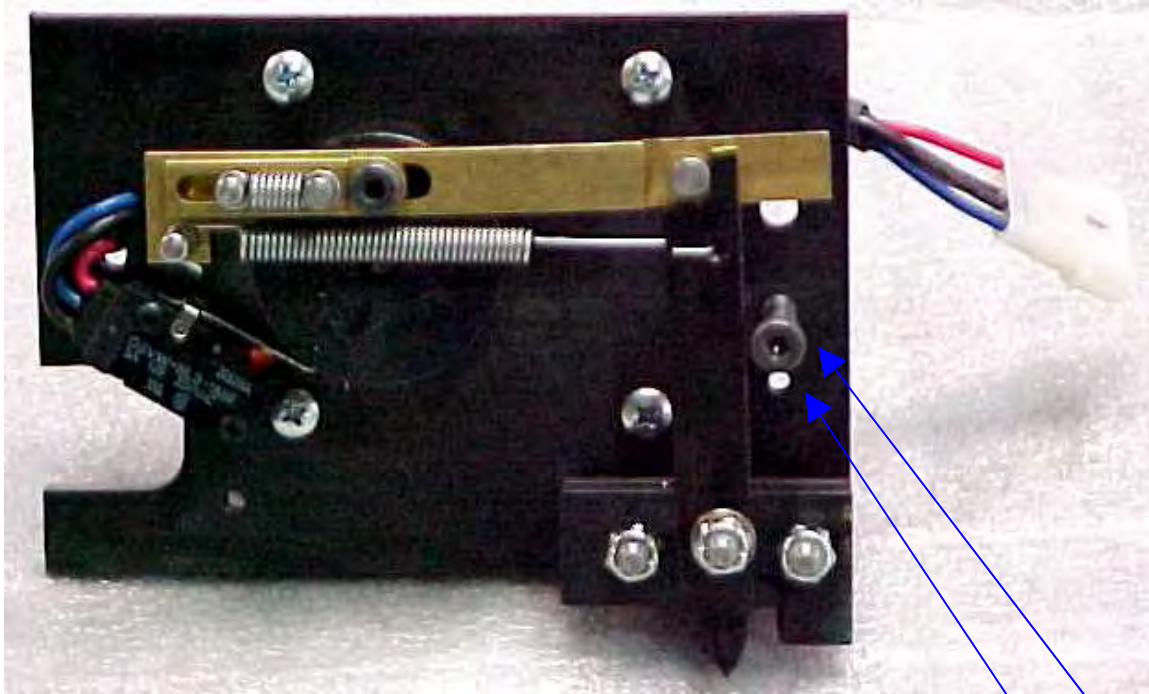

Mount the clamp stop in the first hole for C-size blade configuration.

Mount the clamp stop in the second hole for A and B-size blade configurations.

These stop positions allow adjustment of blade opening for coil Insertion and the above are suggested settings. Some B size coils might work well in the first hole position. Filament size and coil Pitch will be the factors involved.

TABLE ADJUSTMENTS

Now that you have the correct blade configuration ready for the coil diameter you are crimping you need to adjust the table height and cutter head spacing (width) for your book. Refer to page 13 for table adjustment details.

- 1.) Loosen the two clamp knobs on the left-hand book guide; position the guide so your book will be approximately centered on the machine. Re tighten the two clamp knobs.
- 2.) Using the same procedure position the right-hand book guide so it just touches the right edge of the book. The book should lay flat on the table between the book guides and be able to slide in and out, but not side to side.
- 3.) Use a #3 Phillips screwdriver to loosen the two bolts located under the two access holes in the top cover. The two cutter heads will now be able to slide from side to side. Slide the two cutter heads so the cutter blades are close to the correct loop of the coil at each end of the book.
- 4.) Make a rough adjustment on the table height by turning the two table height knobs. Turn the knobs clock-wise to lower the table and counter clock-wise to raise the table. Adjust the table height so the coil in the book is in the center of the cutter blade assembly on both sides. The right side of the table will always be adjusted higher than the left side.
- 5.) Adjust the two cutter heads from side to side until the coil in the book slides into the cutter blades at the correct loop of the coil on each side of the book
- 6.) Make a finer adjustment to the table height so the coil in the book is properly positioned in the center of the cutter blades.
- 7.) Make your final cutter head adjustments side to side if needed and then re tighten the two bolts under the access holes of the top cover using the #3 Phillips screwdriver.
- 8.) Test crimp a book by depressing the foot pedal.
- 9.) Make your final table height adjustments if needed. Then repeat steps #8 and #9 until the desired crimp is achieved.


TABLE ADJUSTMENT DETAILS

TWO ACCESS HOLES
IN TOP COVER

TABLE HEIGHT
ADJUSTER KNOBS:
ONE ON EACH SIDE


BOOK GUIDES: ONE ON
EACH SIDE

CLAMP KNOBS:
TWO ON EACH BOOK
GUIDE

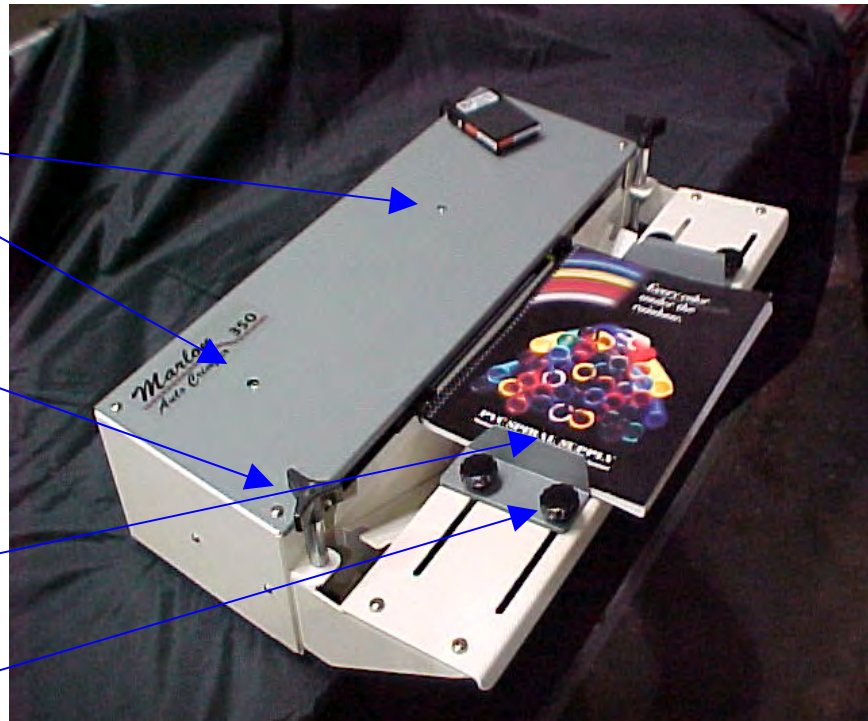


Heads with A-Blades installed

Left Side

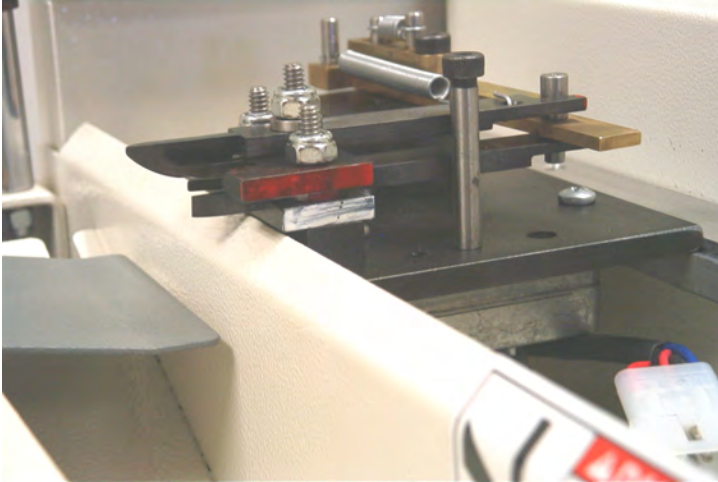


Right Side

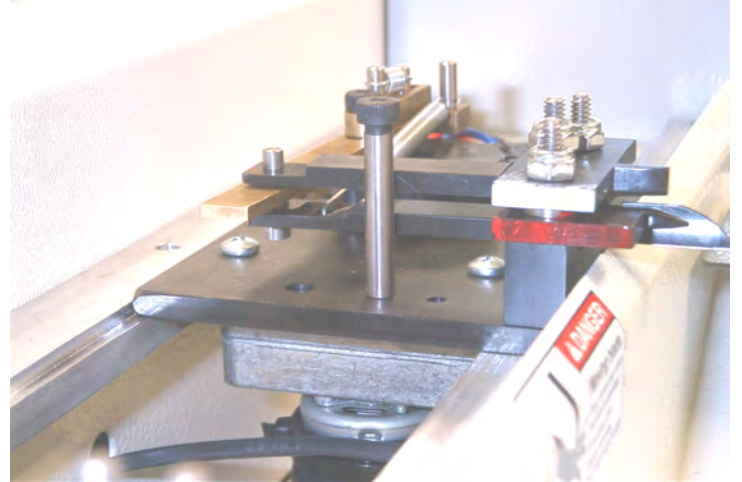

A-Blade Parts Layout in Order of Use

Left Side

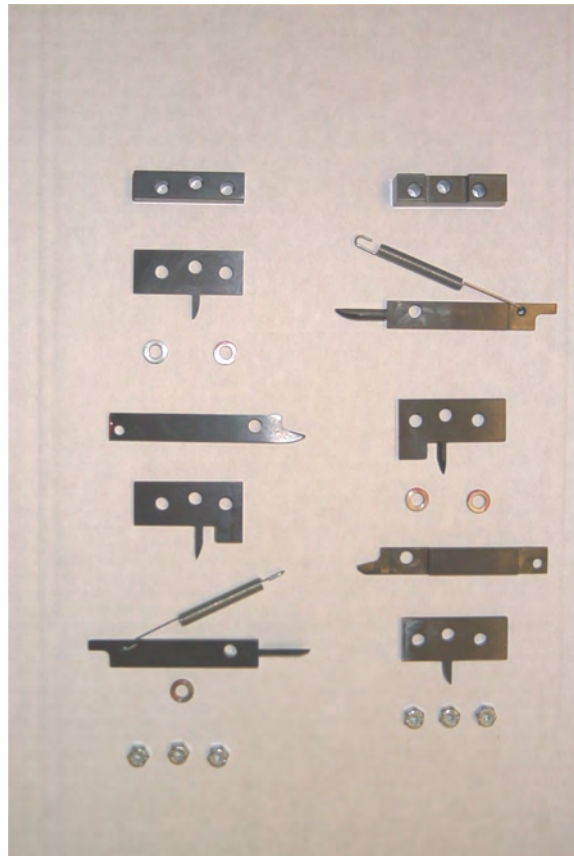


Right Side

Heads with B-blades installed

Left Side




Right Side

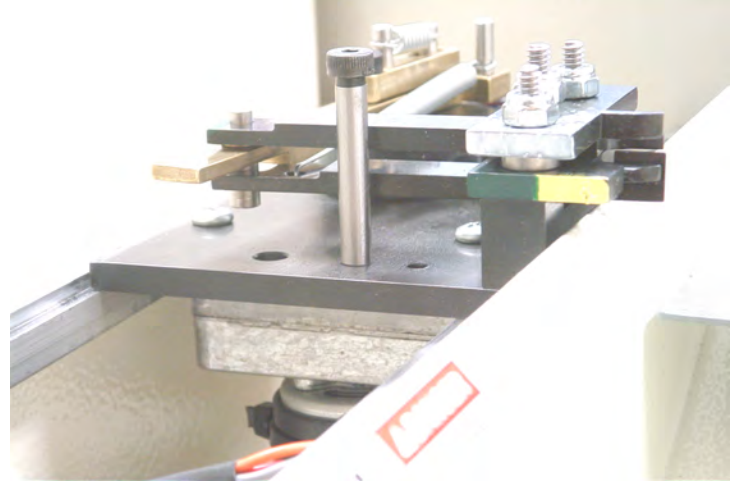

B-Blade Parts Layout in Order of Use

Left Side

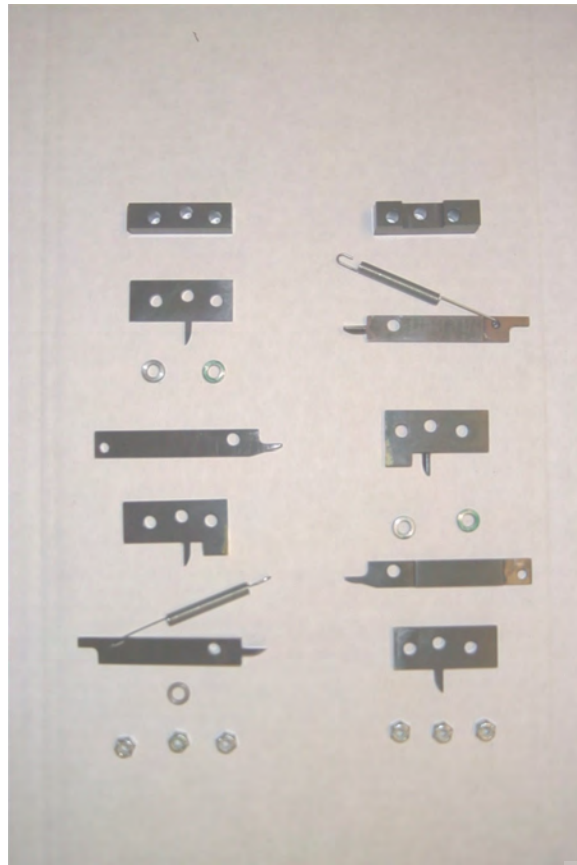


Right Side

Heads with C-blades installed

Left Side




Right Side

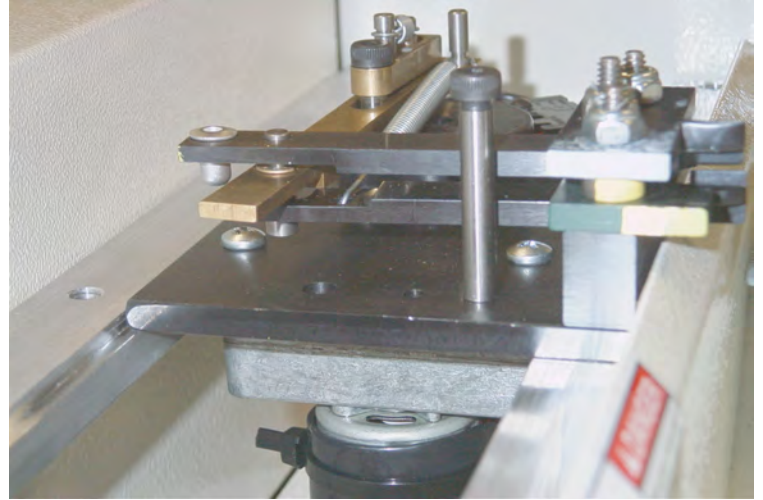

C-Blade Parts Layout in Order of Use

Left Side

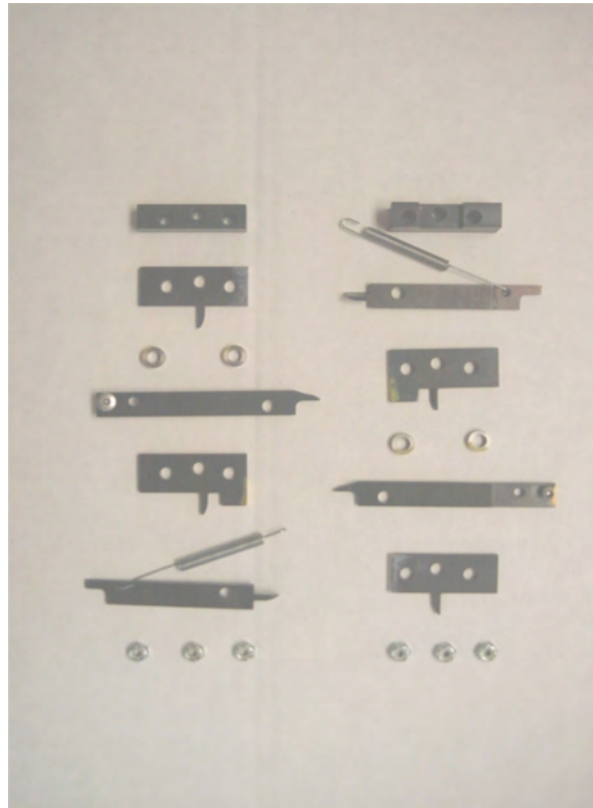

Right Side

MARLON 350E AUTO CRIMPER



MARLON INC.
123 EAST 45TH STREET
BOISE, IDAHO 83714
Ph 1-(800) 461-9301
Fax 1 (208) 321-2796

We Have it All...



MyBinding.com *When Image Matters.*

Guaranteed Lowest Prices on an
Endless Selection of Binding Systems, Laminators,
Paper Shredders, Supplies and Accessories.

We have you covered with Expert Advice
and Support. Our popular blog keeps you up to
date on the latest tips and techniques to make
your most important binding and laminating
tasks a success.

Call Us Today

1-800-944-4573

Our Trusted Partners

GBC / Ibico
Fellowes
Powis Fastback
Unibind
Akiles
Renz
Tamerica
Rhin-O-Tuff
DFG

Pro-Bind
Martin Yale
MBM
Formax
Intimus
Dahle
HSM
Standard
Xyron

Challenge
Lasko-Wizer
GBC Shredmaster
Avery
Wilson Jones
Cardinal
Samsill
Universal

BINDING MACHINES
BINDING SUPPLIES
LAMINATORS
I.D. ACCESSORIES
BOARDS & EASELS
PAPER SHREDDERS
XYRON LAMINATORS
COIL BINDING MACHINES
UNIBIND BINDING MACHINES
FASTBACK BINDING EQUIPMENT
PAPER FOLDING MACHINES
LAMINATING POUCHES
ROTARY TRIMMERS
CLEAR COVERS
TWIN LOOP WIRE
REGENCY COVERS
PLASTIC BINDING COVERS
VELOBIND BINDING MACHINES
PAPER HANDLING EQUIPMENT
THERMAL BINDING MACHINES
PROCLICK BINDING SYSTEMS
COMB BINDING MACHINES
COMB BINDING SUPPLIES
WIRE BINDING MACHINES
POUCH LAMINATORS
LAMINATING ROLLS
3-RING BINDERS
ROLL LAMINATORS
VELOBIND SPINES
PAPER CUTTERS
PAPER JOGGERS
LETTER OPENERS
THERMAL COVERS
UNIBIND SUPPLIES
PROCLICK SPINES
ZIPBIND SPINES
LINEN COVERS
SPIRAL COIL
INDEX TABS