

Martin Yale BM 101 Booklet Maker


Instruction Manual




Provided By

MyBinding.com®
When Image Matters.


Booklet Making In 4 Easy Steps

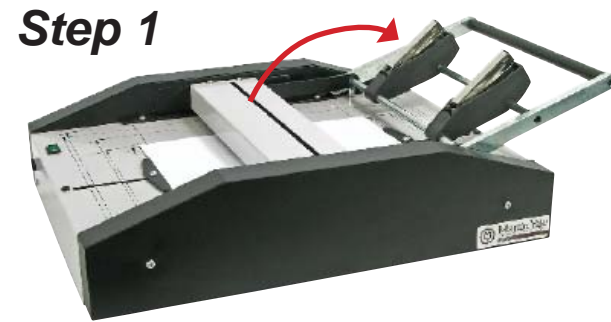

Center the paper on the grid

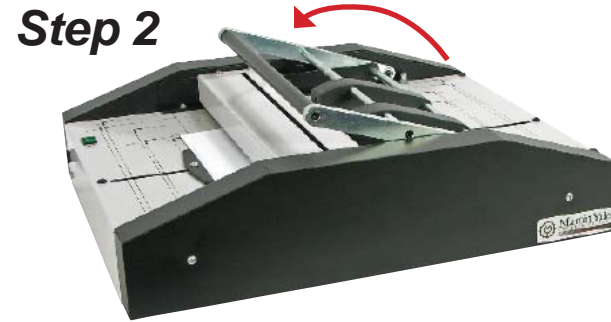

Bring the lever down to activate both staplers

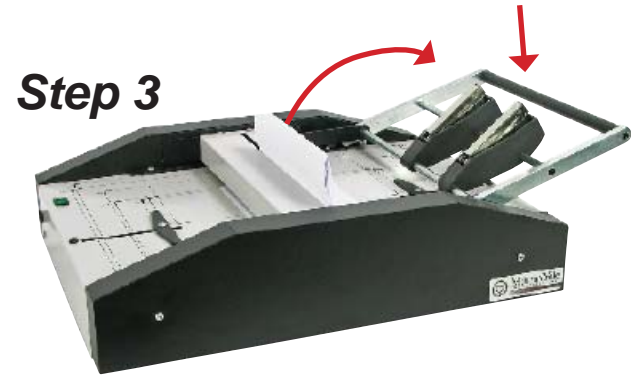

Reverse the lever to activate folder



Remove finished booklet

 **MARTIN YALE®**

Model BM101 - Booklet Maker

Thank you for purchasing the BM101 Booklet Maker. This product will prove to be a great value and allow you to efficiently produce booklets of up to 40 pages (10 sheets) inside your choice of cover material for many years.



Replacement Parts:

<u>Item#</u>	<u>Description</u>
M-S025052	65T double-sided belt
M-S033073	Illuminated ON/OFF switch
200	Martin Yale Roller Cleaner

Trouble Shooting / Technical Assistance

Call 1-800-225-5644

Contact Information:

251 Wedcor Avenue
Wabash, IN. 46992
www.martinyale.com
info@martinyale.com

Specifications:

Dimension of Unit:	15 ³ / ₄ " x 19 ³ / ₄ " x 5 ¹ / ₂ "
Weight of Unit:	34 lbs.
Voltage:	120V
Paper Capacity:	10 sheets of 20 lb bond with cover
Paper Sizes:	8 ¹ / ₂ " x 11", 8 ¹ / ₂ " x 14", 11" x 17", A3, A4, B4 and B5
Staplers (2):	4 position - used standard staples

M-S027913

WARNING! Never connect power to the model BM101 booklet maker until you are ready to set up and operate the machine. This machine contains moving parts. During setup, operation, and maintenance; keep hands, hair, loose clothing, and jewelry away from all moving parts. Serious bodily injury could result. Service or disassembly of the unit should only be performed by qualified personnel with the power disconnected and locked out.

PREPARATION:

After unpacking your NEW Booklet Maker, select a flat and stable surface of a comfortable working height and position the unit near a power outlet. Securely insert power cord into the 120V outlet.

LOADING THE STAPLERS:

Firmly pull the stapler bottom away from its main housing (see Fig. 1) and swing open until the spring loaded slide fully retracts. Insert standard staples into the stapler (see Fig. 2) and close the unit. Use caution and keep fingers away from end of stapler when closing to prevent being punctured by staples.



Fig. 1



Fig. 2

POSITIONING OF THE STAPLERS:

The chart located on top of the unit to the right of center (see Fig. 3) will designate the positions of the staplers for that specific paper size.

Grasp the top of the stapler housing (see Fig. 4) and position the stapler over the correct letter designation until you feel the stapler click into position on the locator rod.

PAPER SIZE	STAPLER LOCATION			
8.5X11	A	B		
8.5X14	A	B		
11X17	A			D
B5		B		D
A4	A	B		
B4	A		C	
A3	A			D

Fig. 3



Fig. 4

PAPER POSITIONS:

Insert your collated sheets into the unit (see Fig. 5) with your cover sheet on top. Place the stack against the frame rail and both paper guides.

Adjust the paper guides until firmly against each side of the paper stack (see Fig. 6). The stack will automatically be positioned due to the synchronized self-centering paper guides.



Fig. 5

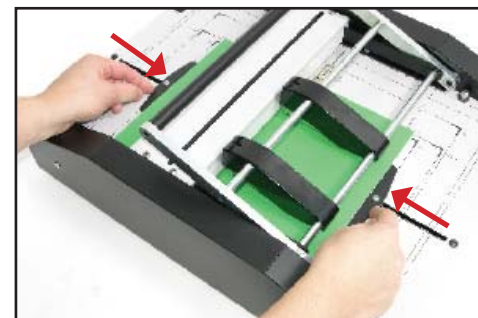


Fig. 6

POWER TO THE BOOKLET MAKER:

The power switch is located at the top left corner of your unit. Press "ON" to supply power to the unit (see Fig. 7). The switch will illuminate when power is on. If switch does not illuminate check the power cord to the outlet. Turn the unit "OFF" when not in use.

STAPLING THE BOOKLET:

Place your hand on the top handle bar and midpoint between the stapler heads (see Fig. 8). Press downward firmly until the staples have been fully inserted through the paper stack.

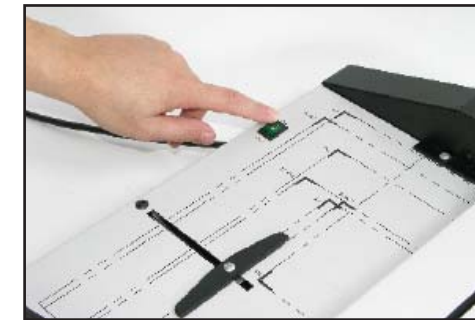


Fig. 7



Fig. 8

FOLDING THE BOOKLET:

After the sheets have been stapled, rotate the handle and firmly press downward. Your booklet will be folded and will be ejected (see Fig. 9). Releasing the handle and/or returning it to the stapling position will stop the folding motor.

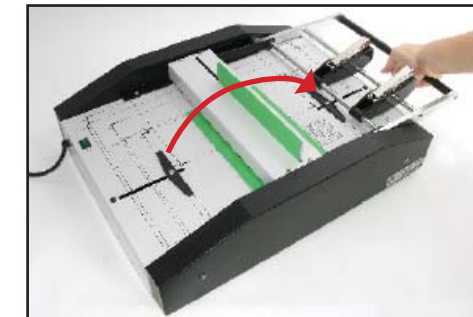


Fig. 9

MAINTENANCE:

With extended usage, the folding rollers may become contaminated with inks and/or paper dust and will require cleaning.

Before performing any maintenance, turn the power switch to the "OFF" position, remove the (4) screws from the top of the roller cover (see Fig. 10) and remove cover.

For cleaning ink contamination, the Martin Yale Roller Cleaner is recommended. Spray a clean cloth liberally with the cleaner (see Fig. 11) and clean the roller surface using firm strokes (see Fig. 12). Replace roller cover before use.



Fig. 10



Fig. 11



Fig. 12

We Have it All...



MyBinding.com *When Image Matters.*

Guaranteed Lowest Prices on an
Endless Selection of Binding Systems, Laminators,
Paper Shredders, Supplies and Accessories.

We have you covered with Expert Advice
and Support. Our popular blog keeps you up to
date on the latest tips and techniques to make
your most important binding and laminating
tasks a success.

Call Us Today

1-800-944-4573

Our Trusted Partners

GBC / Ibico

Fellowes

Powis Fastback

Unibind

Akiles

Renz

Tamerica

Rhin-O-Tuff

DFG

Pro-Bind

Martin Yale

MBM

Formax

Intimus

Dahle

HSM

Standard

Xyron

Challenge

Lasko-Wizer

GBC Shredmaster

Avery

Wilson Jones

Cardinal

Samsill

Universal

BINDING MACHINES

BINDING SUPPLIES

LAMINATORS

I.D. ACCESSORIES

BOARDS & EASELS

PAPER SHREDDERS

XYRON LAMINATORS

COIL BINDING MACHINES

UNIBIND BINDING MACHINES

FASTBACK BINDING EQUIPMENT

PAPER FOLDING MACHINES

LAMINATING POUCHES

ROTARY TRIMMERS

CLEAR COVERS

TWIN LOOP WIRE

REGENCY COVERS

PLASTIC BINDING COVERS

VELOBIND BINDING MACHINES

PAPER HANDLING EQUIPMENT

THERMAL BINDING MACHINES

PROCLICK BINDING SYSTEMS

COMB BINDING MACHINES

COMB BINDING SUPPLIES

WIRE BINDING MACHINES

POUCH LAMINATORS

LAMINATING ROLLS

3-RING BINDERS

ROLL LAMINATORS

VELOBIND SPINES

PAPER CUTTERS

PAPER JOGGERS

LETTER OPENERS

THERMAL COVERS

UNIBIND SUPPLIES

PROCLICK SPINES

ZIPBIND SPINES

LINEN COVERS

SPIRAL COIL

INDEX TABS

