

ProSeal 25 and 44 Laminator

Service Manual



Provided By

MyBinding.com
When Image Matters.



ProSeal™ 25

ProSeal™ 44

**ProSeal™ 25 / ProSeal™ 44
Technical Service Manual
REV 2.0**

Revision History

Amendments will be listed on this page, including their descriptions and dates.

REV	Date	Description
1.0	Nov 1999	Original version (pre-release).
2.0	Feb 2000	Released version; the manual covers US as well as EU machines. Page numbering starts with each section. Changed pages: all. The pressure- and nip setting procedures have been changed in accordance with the new roller setup (uncrowned top roll, crowned bottom roll).

Safety Statements

The ProSeal™ laminators have been designed with operator safety as a primary objective; however, operators must be familiar with the controls, as well as the operation **before** using the unit.

The electrical and drive-system components are isolated from contact with the operator by enclosing them within plastic end covers that are bolted on. Only qualified service technicians should remove these protective covers after power to the machine is removed including disconnecting the power cord.

The heated top roller can reach temperatures of 160C (320°F). For operator safety, a protective heat-shield is mounted over the top roller, and attached to the top aluminum extrusion. Adequate ventilation is guaranteed; because of this, the outside temperature of the extrusion will never exceed 45°C (113°F).



Only qualified service technicians should remove the top extrusion in order to clean the rollers if necessary.

Safety Features

The material inlet opening has a height that is in accordance with EN294 clause 4.5.2; the IEC1032 test finger cannot enter this opening.

The heating system is provided with an over-temperature device, which will shut off the top roller-heating element once a heating system failure occurs.



Caution
Everyone working around the laminator must avoid wearing loose fitting clothing (ties!) or dangling jewelry, which could catch in the laminator rollers.

Technical Service hazards



Fire hazard – The laminator contains a heated roller which reaches temperatures of 160°C (320° F). There is a danger of severe burns if the heated roller is touched during servicing.



Mechanical hazard – Failure to use caution near exposed rollers could result in physical injury.

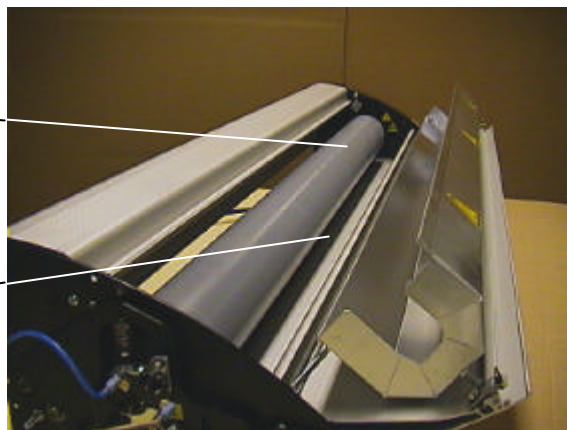


fig. 1

Note:



When performing procedures that require the side covers to be opened, ensure that the power cable is disconnected from the mains. Several parts, like the mains switch (1) and the overtemperature switch (2), could cause electrical shock if the power is not disconnected!

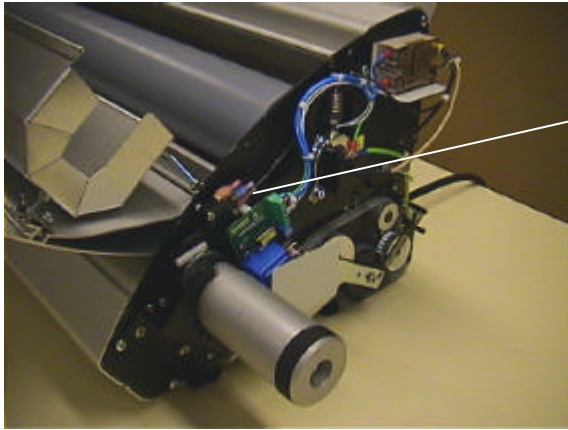


fig. 2

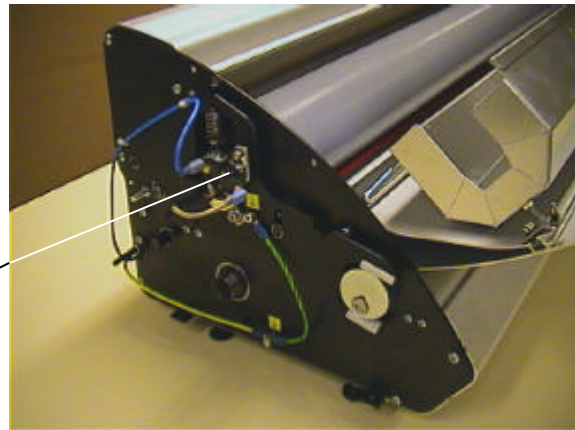


fig. 3

Section 1.	Machine Characteristics	
1-1.	Machine Description.....	1-1
1-2.	Machine Specifications	1-1
Section 2.	Installation	
2-1.	Preinstallation.....	2-1
2-1-1.	Electrical Requirements	2-1
2-1-2.	Workspace Requirements.....	2-2
2-2.	Setup	2-2
Section 3.	Theory of Operation	
3-1.	Control Knob.....	3-1
3-2.	Control Panel.....	3-2
Section 4.	Disassembly / Reassembly Procedures	
4-1.	Opening / Closing the Aluminium Top Cover	4-1
4-2.	Feed-in Table.....	4-2
4-3.	Plastic Side Covers	4-2
4-4.	Heating Element	4-4
4-5.	Software.....	4-6
4-6.	Rear Panel	4-7
4-7.	Solid State Relay	4-8
Section 5.	Adjustment Procedures	
5-1.	Laminating Pressure Adjustment	5-1
5-2.	Nip Adjustment	5-2
5-3.	Temperature Adjustment	5-6
Section 6.	Maintenance	
6-1.	Cleaning of the Machine.....	6-1
6-2.	Regular Cleaning of the Rollers by the Operator.....	6-1
6-3.	Cleaning of the Rollers by Service Technicians	6-1
Section 7.	Troubleshooting	
7-1.	Troubleshooting.....	7-1
Section 8.	Diagrams	
8-1.	Electrical Schematics	8-1
8-1-1.	Schematic Installation Diagram ProSeal 25 – 110V/60Hz.....	8-1
8-1-2.	Schematic Installation Diagram ProSeal 44 – 110V/60Hz.....	8-2
8-1-3.	Schematic Diagram Control PCB 110V 50/60Hz.....	8-3
8-1-4.	Schematic Diagram Controlpanel	8-4
8-1-5.	Schematic Installation Diagram ProSeal 25 – 230V/50Hz.....	8-5
8-1-6.	Schematic Installation Diagram ProSeal 44 – 230V/50Hz.....	8-6
8-1-7.	Schematic Diagram Control PCB 230V 50/60Hz.....	8-7
8-2.	Certified Electrical Components Lists & Spare Part Codes	8-8
8-2-1.	110VAC/60Hz Machines	8-8
8-2-2.	230VAC/50Hz Machines	8-9
8-3.	Mechanical Spare Parts List, Assembly Drawings & Exploded Views.....	8-10
8-3-1.	Mechanical Spare Parts List.....	8-10
8-3-2.	Assembly Drawings & Exploded Views	8-11

Section 1. Machine Characteristics

1-1. Machine Description

The ProSeal™ 25 and ProSeal™ 44 laminators are electro-mechanical devices containing two silicone rollers, a heating element for the top roller, an electronic PIZ controller for a fixed temperature, and a synchronous drive AC motor to maintain a constant process speed.

The ProSeal™ laminators have been designed to be used with ProSeal™ Pouch Boards and ProSeal™ Flexible Pouches. When used with these products, one is able to mount, mount and laminate, and encapsulate prints in one step.

Each machine is provided with a User Manual; the purpose of this manual is to outline the materials and processes when using ProSeal™ supplies using this laminator, to create signs, displays, and flexible graphics with professional results. The manual includes instructions of various laminating procedures, which are meant to give the user comprehensive information needed for the efficient use of his laminator.

These machines have not been tested with any other materials and are not recommended for use with products other than ProSeal™ supplies.

The US versions of the ProSeal™ machines are provided with fixed powercables and NEMA plugs; the European versions are provided with Euro appliance inlets (see also Section 8).

The ProSeal™ laminators meet the Machinery Directive (89/392/EEC & applicable amendments). They are ETL and cETL listed per directive UL 1950 3rd Edition 1995 and CAN/CSA C22.2 No. 950-95.

1-2. Machine Specifications

	ProSeal™ 25	ProSeal™ 44
Mechanical		
Height	12" (305 mm)	12" (305 mm)
Overall Width	40" (1016 mm)	58" (1473 mm)
Depth	15" (380 mm)	15" (380 mm)
Net Weight	77 lbs. (35 kg)	154 lbs. (70 kg)
Shipping Weight	90 lbs. (41 kg)	172 lbs. (78 kg)
Electrical		
US version	110VAC/60Hz 12A	110VAC/60Hz 16A
EU version	230VAC/50Hz 7A	230VAC/50Hz 9A
Process		
Working width	25" maximum (635 mm)	44" maximum (1120 mm)
Roller Line Pressure	1 N/mm	0.8 N/mm
Process speed	1'/min (305 mm/min)	1'/min (305 mm/min)
Process temperature	311-320°F (155-160°C)	311-320°F (155-160°C)
Nip Settings	0 (closed nip)	0 (closed nip)
	1/16" (1.5 mm)	1/16" (1.5 mm)
	1/8" (3 mm)	1/8" (3 mm)
	3/16" (5 mm)	3/16" (5 mm)
	¼" (6 mm)	¼" (6 mm)
Order Codes		
US version	60766	60824
EU version	60794	60853

Section 2. Installation

2-1. Preinstallation

The following requirements are applicable:

2-1-1. Electrical Requirements

This unit should only be connected to a power supply outlet of the voltage, amperage, and frequency marked on the rear panel. The laminator has a grounded plug (three prongs). To reduce the risk of electrical shock, this plug is intended to fit only a grounded outlet of the proper amperage, and in only one way.


The US versions of the ProSeal™ machines are provided with fixed powercables and NEMA plugs; the European versions are provided with Euro appliance inlets (see also Section 8).

The electrical specifications of the machines are:


	ProSeal 25	ProSeal 44
US version	110VAC/60Hz 12A	110VAC/60Hz 16A
EU version	230VAC/50Hz 7A	230VAC/50Hz 9A

The ProSeal machines must be installed next to the power outlet; extension cords are not to be used. The plug and the outlet must be easily accessible by the operator.

 For the US versions, there are two types of outlets (receptacles), shown below.




NEMA 5-15R
Using 15 Amp Breaker
ProSeal 25

 

NEMA 5-20R
Using 20 Amp Breaker
ProSeal 44


Note: T-slot is not applicable for Canada

For both EU versions, in the UK, the following is applicable:

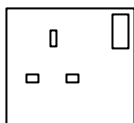


BS 1363 – 13A
wall receptacle:
Use the provided
BS 1363 plug

 For both EU versions, mainland Europe, the following is applicable:



French
Belgium

 

German, Netherlands
Portugal, Spain

Use the provided Schuko plug (10A).

Wirecolours:

General (EU)	USA	Name
Blue	White	N eutral
Yellow/Green	Yellow/Green	G round
Brown	Black	Phase (L ive)

2-1-2. Workspace Requirements

- This unit should be situated away from heat sources such as heat registers or stoves.
- The laminator's location or position should not interfere with its proper ventilation.
- There should be enough space around the laminator to feed-in, exit, and trim mounted and/or laminated images.
- The background dust level must not exceed that found in a typical office/computer room environment.
- The work area should be level, flat, and well lit.

2-2. Setup

Procedure:

1. Open the box, and lift the machine out (at least two persons necessary!). Grasp the machine 8"-10" (200mm-250mm) from either side, at the bottom aluminum extrusions. Be careful: the polyethylene bag is slippery!
2. Place the machine on the work area described under 2-1-2.
3. Remove the protective polystyrene foam end covers.
4. Remove the polyethylene bag.
5. Remove the protective sheet, placed between the rollers. To do this: push the knob, situated at the right-hand side, fully inward, and rotate fully clockwise.
6. Check for damages.
7. Plug the power cable into the grounded outlet as described under 2-1-1. The machine will now start and heat up.

Section 3. Theory of Operation

3-1. Control Knob

The Control Knob (see figure 4) is located on the right hand side of the laminator and is operated from the front of the machine. The Control Knob has four (4) purposes:

1. Turn the power on.
2. Turn the heat on.
3. Turn the rollers on.
4. Adjust the height of the rollers.

The Control Knob can be operated by pushing it in approximately 1/4" (6mm) to the left. Once the knob has disengaged from the stop, it may be rotated forward or backward (clockwise or counter-clockwise, viewed from the right hand side of the unit).



fig. 4

To switch the power on, push the knob in and rotate it slowly towards you (counter clockwise as viewed from the right side of the unit). The top LED will light up to indicate that the power is on.

Continue to rotate the knob until the desired measurement corresponds with the indicator window at the base of the knob. Inside the window, the rotation possibilities are shown. Select the measurement that indicates the thickness of the material you will be using with the machine. Releasing the knob so that it moves back to the right and clicks into place will set the rollers for use. The measurements on the knob, 1/4", 3/16", 1/8" and 1/16" (6, 5, 3, 1.5 mm) correspond to '**Pouch board** thickness'. There is also a fully closed stop for future film only applications.

To turn the laminator off, grasp the control knob and push to the left, rotate the knob away from you as far as it will go (clockwise). This will shut off the machine and open the rollers to permit objects to be removed.

Internal functionality

See figure 5.

Inside the machine, a rod is mounted between the left- and righthand framesheets. The knob is mounted on the rod; it allows axial movement, but no radial movement. The knob is provided with a pin (1), that falls in the indents (2) of a bracket (3). The same rod is provided with an eccentric (4) on either side of the machine. These eccentrics push or pull the arms (5), where the top roller is mounted in, upward or downward. The mains switch is mounted in such a way, that it switches the power off once the are is in its highest position.

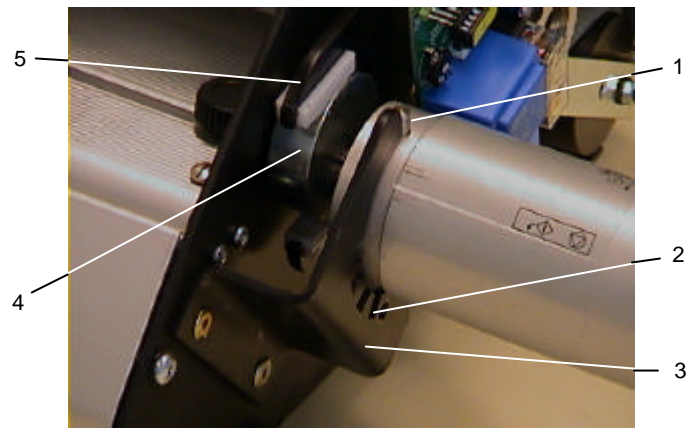


fig. 5

3-2. Control Panel

The Control Panel (see figure 6) is located on the front right of the machine and has three LED indicators. A diagram of the Control Panel is shown in figure 7.

1. The top LED when lit indicates the machine is plugged in and the power is on.
2. The middle LED indicates if the heat is on. Heat is required for ProSeal Pouch Boards and ProSeal Flexible Pouches. If lit, the laminator is in Hot Operation Mode and will heat up to its factory setting. If not lit, the laminator is in Cold Operation Mode.
3. The bottom LED is the Temperature Ready Indicator. If flashing slowly this indicates the laminator is heating up and has not yet reached process temperature. A steady light indicates the unit has reached process temperature and is ready for use. A rapid blinking light indicates that the machine is too hot. This occurs when changing from Hot Mode to Cold Mode. In this case, a steady light indicates the machine has cooled sufficiently for cold processes.



fig. 6

Below the LED lights are two Push Buttons.

1. The top button controls the heating of the roller; it switches the heater on or off. Pushing this button toggles the machine from Hot to Cold or Cold to Hot Operation. The bottom LED light when constantly on, will indicate the appropriate temperature as been reached.
2. The lower button reverses the direction of the motor. The motor will continue to run in reverse until the button is released. This is used to clear jams or foreign objects, should one be drawn into the laminator.

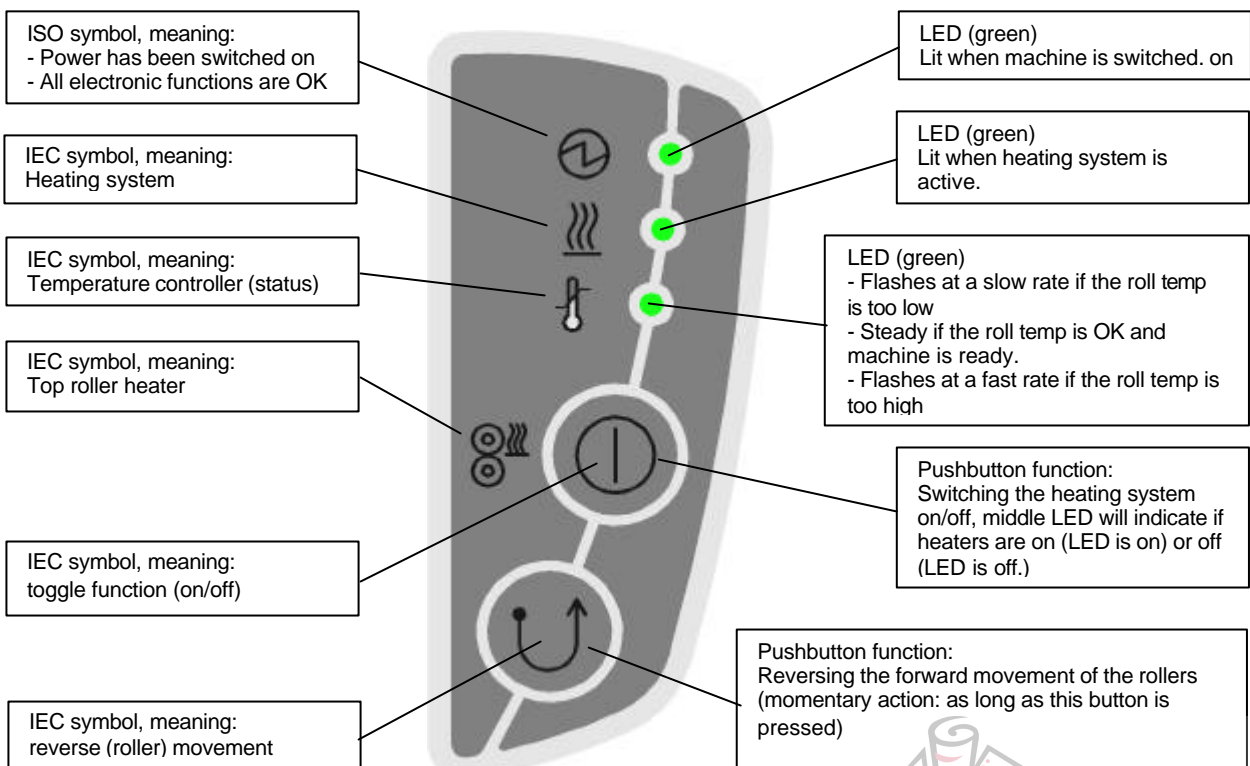


fig. 7

Section 4. Disassembly / Reassembly Procedures

4-1. Opening / Closing the Aluminum Top Cover

Necessary tools: medium flat head screwdriver.
Approximate time: 1 minute.

To open the cover, do the following steps:

1. Insert the screwdriver in one of the holes, situated on the top of the cover. Make sure, that the head fits in the screw, mounted directly underneath this hole. See figure 8.
2. Rotate the screwdriver approximately $\frac{1}{4}$ turn; the direction is not important, as the screw is a so-called 'quarter-turn snap-in screw'.
3. Repeat this at the other side of the top cover.
4. Open the top cover, until it rests on the feed-in table.



fig. 8

To close and lock the cover, proceed with the following steps:

1. Do not close the cover yet, but rotate both screws back $\frac{1}{4}$ turn (to their original position). This is easier when the cover is still open.
2. Now close the cover.
3. Press, using the screwdriver, both screws until they snap back into their locks.

Note:

When performing the Temperature Adjustment Procedure, it is convenient to close the cover without locking the screws. This is called the 'unlocked position'.



Note:

Please make sure, that after any procedure, requiring the top cover to be opened, the top cover is closed and locked. For safety reasons the operator is not allowed to have free access to the hot roller and roller nip.

4-2. Feed-in Table

Necessary tools: medium flat head screwdriver.
Approximate time: 1 minute.

To remove the feed-in table, do the following steps:

Insert the screwdriver in one of the holes, situated on the feed-in table. See figure 9.

1. Rotate the screwdriver approximately $\frac{1}{4}$ turn; the direction is not important, as the screw is a so-called 'quarter-turn snap-in screw'.
2. Repeat this at the other side of the top cover.
3. Lift the table approximately 20 mm ($\frac{3}{8}$ ") by means of the two knurled knobs, and slide it straight out of the machine.



fig. 9

To insert and lock the feed-in table, proceed with the following steps:

1. Insert the table back into the machine, and make sure that it goes in straight, otherwise it might get stuck.
2. Once the table falls into its position, rotate the screws back $\frac{1}{4}$ turn (to their original position). Use the same screwdriver to press both screws until they snap back into their locks.



Note:

Please make sure, that after any procedure, requiring the feed-in table to be removed, the feed-in table is closed and locked. For safety reasons the operator is not allowed to have free access to the hot roller and roller nip.

4-3. Plastic Side Covers

Necessary tools: hexalobular screwdriver TX25, Allen key 4mm.
Approximate time: 5 minutes.

Note:

To remove the covers, it is necessary to perform the 'Opening / Closing the Aluminum Top Cover' Procedure, described in Section 4-1.

To remove the side covers, do the following steps:

1. Remove the two self-tapping screws, using the TX25 driver, as shown in figure 10. The right hand cover is shown here.

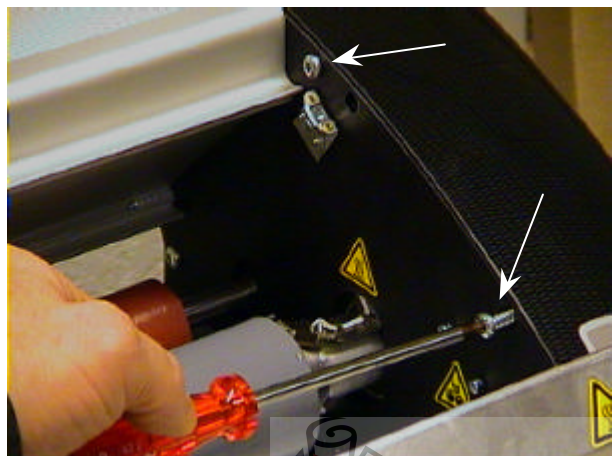


fig. 10

2. Remove the self-tapping screw, situated at the rear side of the machine, using the TX25 driver, as shown in figure 11.

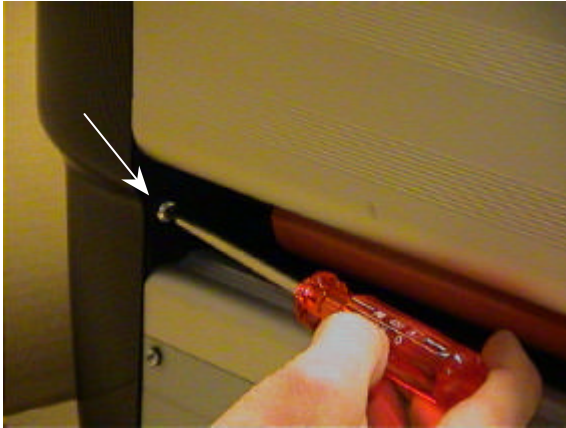


fig. 11

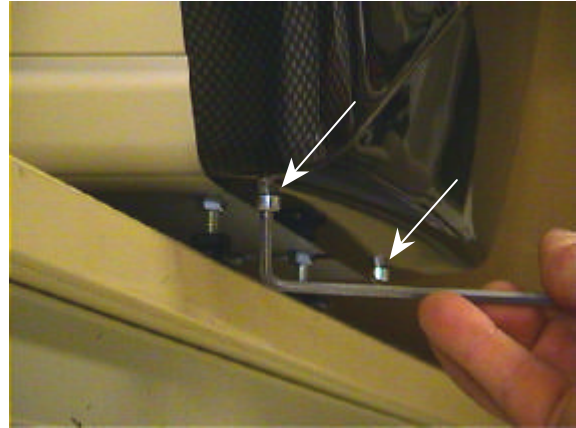


fig. 12

3. Remove, using the Allen key 4mm, the two M5 socket screws, situated at the bottom of the cover. It's best practice to slide the machine to the edge of the table or counter where it's placed. See figure 12.
4. Carefully remove the right hand cover from the frame of the machine. Now, a flatcable, connected to the Control PCB, will become visible. Hold the cover with one hand, whilst removing the flatcable connector from the PCB. See arrow in figure 13.
5. The procedure for the left-hand cover is similar, though it's obvious that there's no flatcable on this side.



fig. 13

Assembly of the cover is in reverse order.



Note:

Make sure, that the flatcable has been placed back onto the PCB connector. Take care, that the flatcable is not twisted.

4-4. Heating Element

Necessary tools: Allen key 3mm.
Approximate time: 10 minutes.

Note:

To disassemble / reassemble the heating element, it is necessary to perform the 'Plastic Side Covers' Procedure, described in Section 4-3.



Make sure that the power cord is disconnected from the mains!

The heating element (see figure 14), is a quartz tube, having a spiral wound filament mounted inside.

The quartz tube is fragile; take care when handling the element.



fig. 14

To exchange the heating element, perform the following procedure:

1. Remove, on the left-hand side of the machine, the blue fast-on connector (1) from the overtemperature switch (2). See figure 15.
2. Slide the heater wire out of the slot that's in the heater bracket.

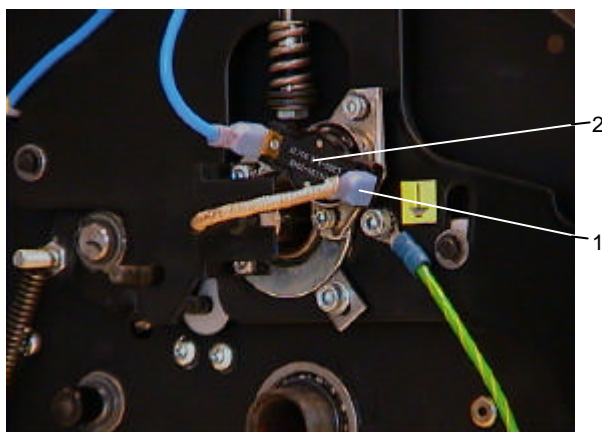


fig. 15

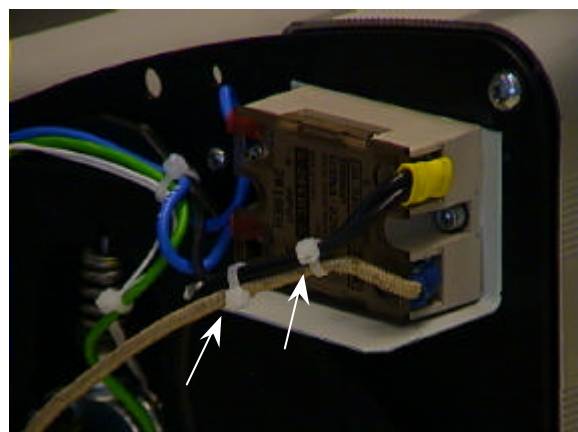


fig. 16

3. Cut, at the right hand side of the machine, the two tie-wraps, that hold the wire of the heating element to the other two (black) wires. See figure 16.

4. Loosen the screw, which attaches the heater wire to the Solid State Relay. See figure 17.

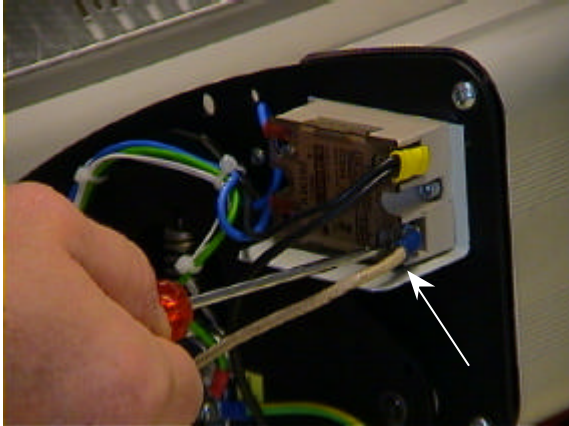


fig. 17

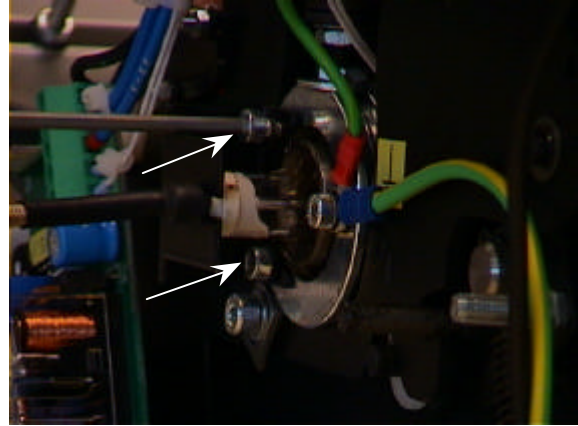


fig. 18

5. Remove the heater bracket on the right hand side of the machine (see figure 18), and slide the heater wire out of the slot, that's in the heater bracket.

Now, the heating element can be taken out of the roller.

Note:

When a heating element has to be installed into the roller, the quartz tube has to be cleaned first. Proceed as follows:

Insert the heating element, **with the end having the shortest wire**, into the roller core. Make sure, that the wire is bent straight, to smoothen the insertion.

Whilst inserting, clean the quartz tube with a lint-free cloth, lightly dampened with IPA (Isopropanol). Do not touch the quartz tube with your fingers!

This is important, because fingerprints will burn when the heater is on, and can possibly damage the quartz tube.

See figure 19.



Always be very careful when using IPA! IPA is very flammable! The flash point of IPA is 11°C (51.8°F). The self-ignition temperature is 400°C (752°F).

Once the element is placed in the roller, reassemble all parts in the reverse order.

Note:

Do not forget to attach two new tie-wraps, and mount them exactly as the two that were removed previously.

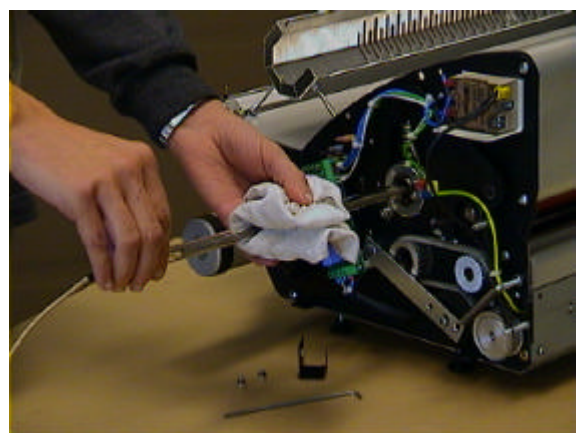


fig. 19

4-5. Software

The Control System of the ProSeal Laminator is software driven. The software resides in a small embedded controller, mounted on the Control PCB.

Necessary tools: small flat-head screwdriver.
Approximate time: 3 minutes.

Note:

To change / upgrade the software, it is necessary to perform the 'Plastic Side Covers' Procedure, described in Section 4-3.



Make sure that the power cord is disconnected from the mains!

1. Insert the small screwdriver between the processor and its socket, mounted on the PCB. See figure 20. Carefully remove the processor.
2. To insert the new processor, make sure that the small pins are not bent, and that their pin-to-pin distance matches the hole-to-hole distance on the socket.
3. Carefully insert the new processor. Make sure that the pins do not bend. Make sure as well, that the small notch on the side of the processor matches the symbol, printed on the PCB. The notch must be on the left side (arrow in figure 20).
4. Discard the old processor.

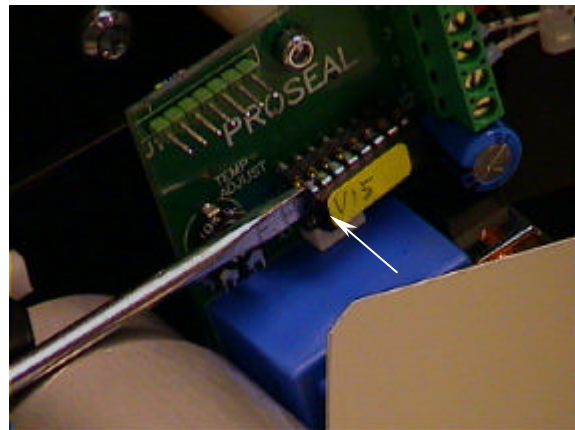


fig. 20

4-6. Rear Panel

Necessary tools: Phillips crosshead screwdriver (medium), open-ended spanner 8mm, knife.

Necessary materials: two tie-wraps (2.5 – 3 mm wide).

Approximate time: 10 minutes.

Note:

To remove the rear panel, it is necessary to perform the 'Plastic Side Covers' Procedure (see Section 4-3) first.

Perform the following steps:

1. See figure 21.
Cut the two tie-wraps (arrows) at the left-hand side of the machine. Remove the blue cable connector from the overtemperature switch (1). Remove the nut from the ground connection stud (2).

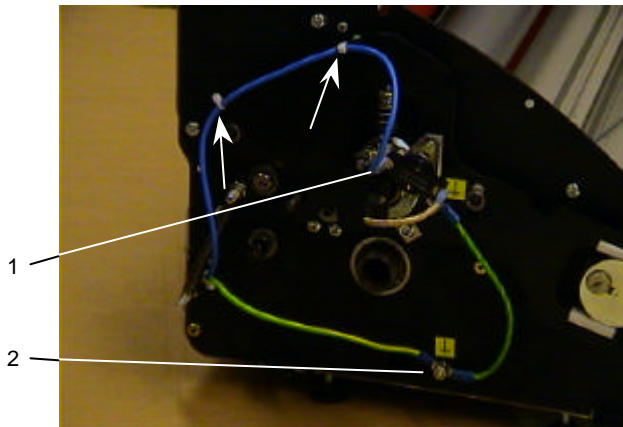


fig. 21

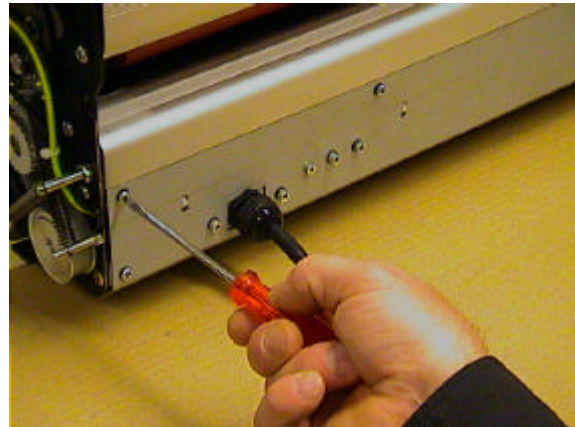


fig. 22

2. Remove the seven crosshead self-tapping screws from the rear panel (see figure 22).
3. Carefully pull the rear panel backward, whilst pulling the two wires (the yellow/green and the blue one) back through the plastic protective bushing, that's mounted in the left-hand framesheet.
4. When the wires are clear from the bushing, swing the rear panel a quarter turn away from the machine. Take care not to damage the wires (1) going to the motor. See figure 23.
5. To mount the rear panel back to the machine again, swing it far enough towards the machine, to insert the two wires into the bushing.
6. Whilst pulling the wires through the bushing, swing the rear panel further to the machine.
7. When mounting the rear panel, make sure that the two slots (2), on either side in the panel, grab the two bent parts at the underside of the framesheets.
8. Next, push the rear panel upward to its original position and use the crosshead screws to fasten the panel again. Do not forget the serrated washers!

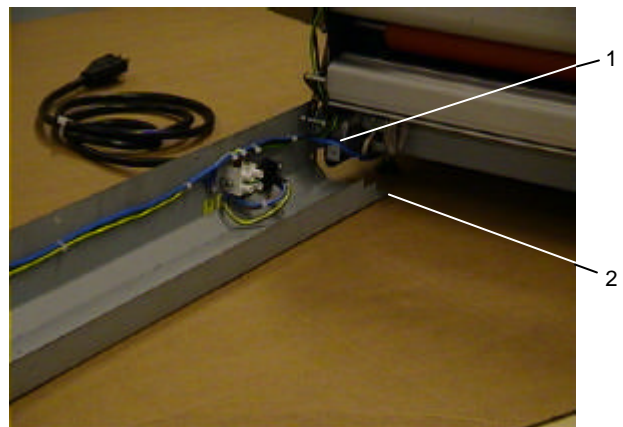


fig. 23

9. Apply the two new tie-wraps exactly on the original positions (into the holes), put the blue connector back onto the overtemperature switch, and mount the ground wire back to its position. Put the serrated washers back the way they came off: one on either side of the two wire-eyelets.

4-7. Solid State Relay

Necessary tools: medium flat-head screwdriver, Allen key 3 mm.
Approximate time: 5 minutes.

Note:

To remove the Solid State Relay, it is necessary to perform the 'Plastic Side Covers' disassembly procedure (see Section 4-3) first. Only the right hand cover has to be removed.



Make sure that the power cord is disconnected from the mains!

Perform the following steps:

1. Loosen all four screws that clamp the wires. They are marked 1 through 4. See figure 24.
2. Bend the wires a bit away from the Solid State Relay.
3. Remove the two M4 bolts that hold the Solid State Relay together with the bent sheet (fire enclosure), that's mounted behind it.
4. Now you can remove the Solid State Relay, together with the bent sheet.
5. When mounting the Relay, make sure that the four clamping screws and the two M4 bolts are tight. Don't forget the serrated washers that belong under the M4 bolt heads.

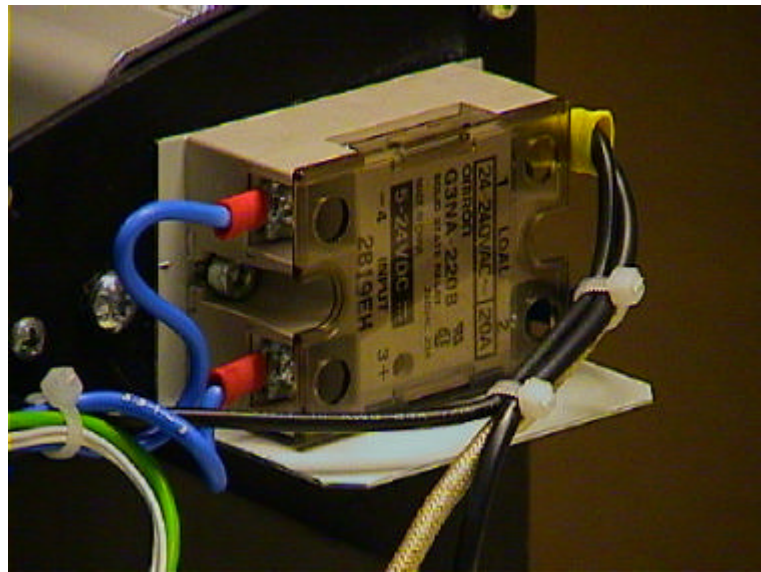


fig. 24

Note: make sure, that the relay is mounted in the proper way: the coding on the blue wires should correspond with the numbers on the relay; the two black wires on clamp no. 1, the wire from the heating element on clamp no. 2.

Section 5. Adjustment Procedures

5-1. Laminating Pressure Adjustment

Note:

- To perform the following adjustments, it is necessary to remove both plastic side covers first. See Section 4-3: Disassembly / Reassembly Plastic Side Covers.
- Note: the top roller must be at room temperature, before this procedure is being performed.
- Next, the heating element, including both heater brackets, has to be removed. See the 'Heating Element' Procedure described in Section 4-4.
- After completion of the Laminating Pressure Adjustment procedure, it is mandatory to continue with the Nip Adjustment Procedure described in Section 5-2.

Necessary tools: 10mm open-ended spanner, small flat-head screwdriver, Allen key 2mm.
Approximate time: 15 minutes.

To adjust or set the laminating pressure, the following special devices are required:

The Pressure Display Unit (PDU).

This unit has to be plugged in a wall socket; the two pressure sensors can be plugged in at either side of the PDU. The pressure (actually: force) display reads in Kilograms. See figure 25.

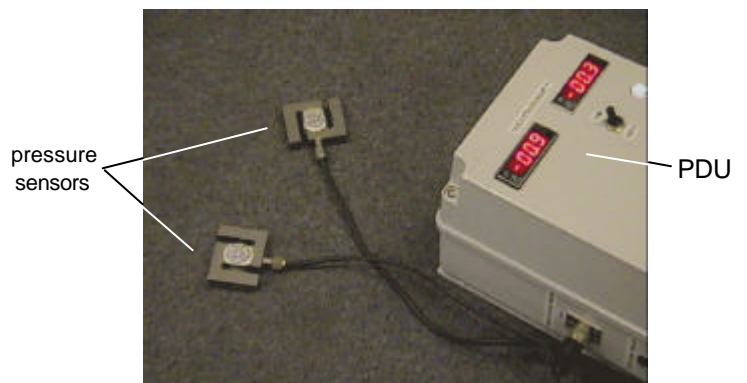


fig. 25

Together with the PDU, a set of sensor-supports has to be used. Each machine type needs a different set of sensor-supports. For the ProSeal 25, a set, shown in figure 26 is necessary; figure 27 shows the set for the ProSeal 44.

Note: each figure shows only half the set.



fig. 26

support set for ProSeal 25



fig. 27

support set for ProSeal 44

The tools shown above have to be inserted in the roller journals, at either side of the machine. To insert the tools into the top roller, the heating element, including **both** brackets, has to be removed first. See the disassembly / reassembly procedure in Section 4-4.

Next, the nip adjustment strips have to be loosened on either side of the machine. See figure 28 and 29; the detailed adjustment strip is shown figure 30. Note that the strip must not touch the top roller bearing housing during the pressure adjustment procedure.

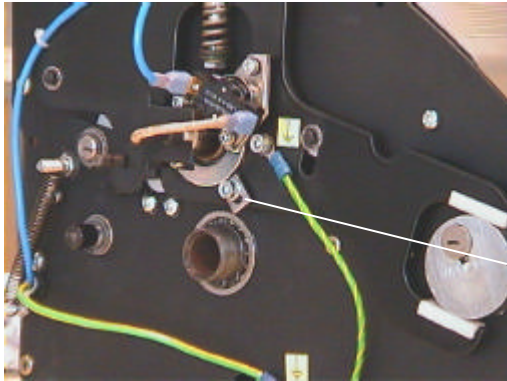


fig. 28

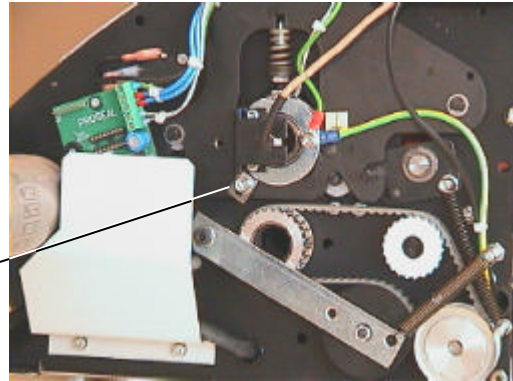


fig. 29

Note:

The figures shown above, show the adjustment strips on the ProSeal 25; the adjustment strips on the ProSeal 44 are positioned **under** the bearing housing, they are larger, and mounted with **two** bolts.

Make sure that there is some space between the adjustment strips and the bearing housings, see figure 30.

At the left-hand side of the machine, the overtemperature switch has to be turned away, to the right. In order to do this, remove the M4 socket screw at the top of the switch, and loosen the other M4 socket screw a bit, using the Allen key 3mm. See figure 31, (2).

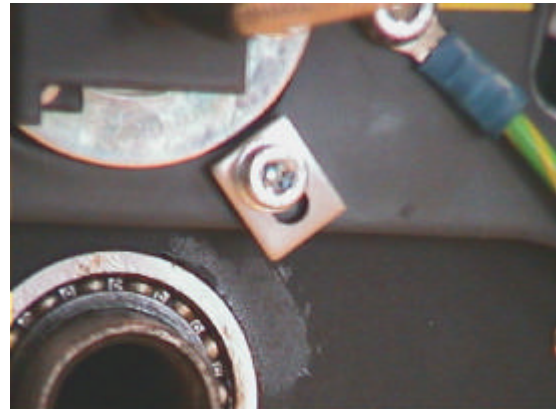


fig. 30

To place the pressure sensors between the supports, it is necessary to open the roller nip fully. In order to do this, push and rotate the nip adjustment knob, situated on the right-hand side of the machine, inward, and fully clockwise.

Insert the supports, together with the sensor, all the way into the roller journals. The sensor supports should have their flat sides facing each other (see fig. 31, 1), and the holes in the sensor should fit over the pins in the supports.

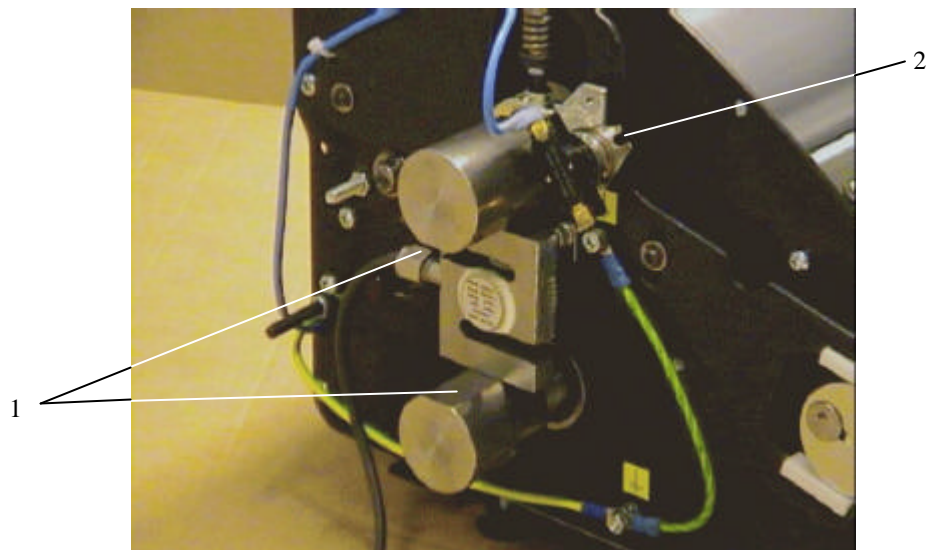


fig. 31

To insert a sensor support into the right-hand journal of the bottom roller, the belt tensioner assembly has to be removed first (already removed in figure 32). Use the small screwdriver to remove the retaining clip from the tensioner arm pivot axis.

See figure 32.

After disassembly of the belt and tensioner, the supports can be inserted (1) as previously described.

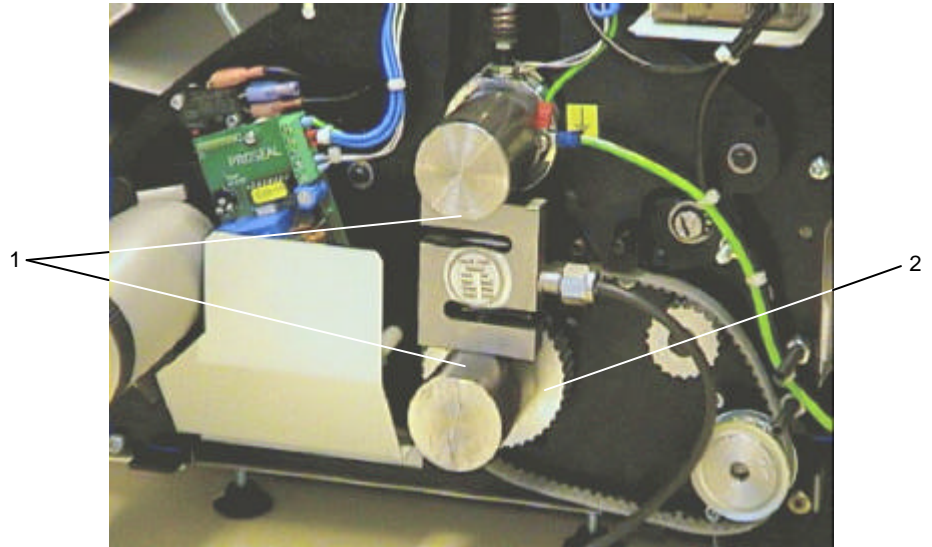


fig. 32

Now, push and rotate the nip adjustment knob until the pin, mounted in the knob, falls into the first notch (relative to top) from the indent bracket.

See figure 33.

Pressure will be applied to the pressure sensors, and the pressure can be read on the PDU.

To change the pressure, place the 10mm open-ended spanner on the M6 nut, that's **directly under** the compression spring (so, the upper jamnut).

On the left-hand side of the machine, it's best to remove the blue connector from the overtemperature switch, to ease access with the spanner. See figure 34.

Rotate clockwise to decrease the pressure, counter-clockwise to increase the pressure (seen from above).

The pressure settings for each PDU display (so, for either side of the machine) should be as follows:

ProSeal 25 – 35 kilograms.

ProSeal 44 – 46 kilograms.

If necessary, change these values as described above.

After the adjustment, remove the pressure sensors and the supports.

Assemble all parts in reverse order.

Now, it is mandatory to continue with the Nip Adjustment Procedure described in Section 5-2.



fig. 33

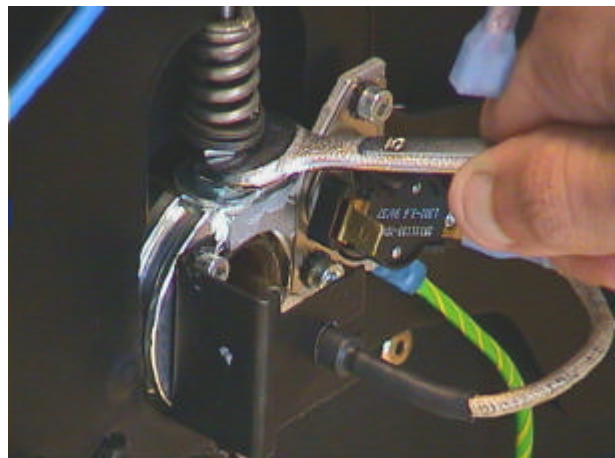


fig. 34

5-2. Nip Adjustment

Note: to perform the following adjustments, it is necessary to remove both plastic side covers first. See Section 4-3: Disassembly / Reassembly Plastic Side Covers.

Necessary tools: Allen key 4mm.

In addition, a metal adjustment sheet, having a specific thickness, is necessary.

For the ProSeal 25, the thickness of this sheet must be 0.5 mm; size: 700x250 mm.

For the ProSeal 44, the thickness of this sheet must be 1.25 mm; size: 1150x250 mm.

Approximate time: 5 minutes.

Note: the top roller must be at room temperature, before this procedure is being performed.

1. Set the roller nip opening to its maximum position by pushing and turning the nip setting knob **fully clockwise**.
2. Next, the nip adjustment strips have to be loosened on either side of the machine (if not loosened already in case the previous procedure has been performed). See figure 35 and 36; the detailed adjustment strip is shown figure 37. Note that the strip must not touch the top roller bearing housing.

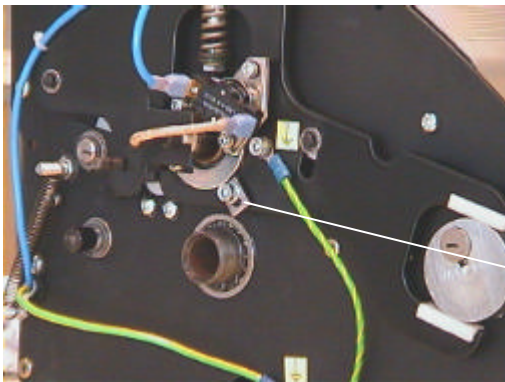


fig. 35

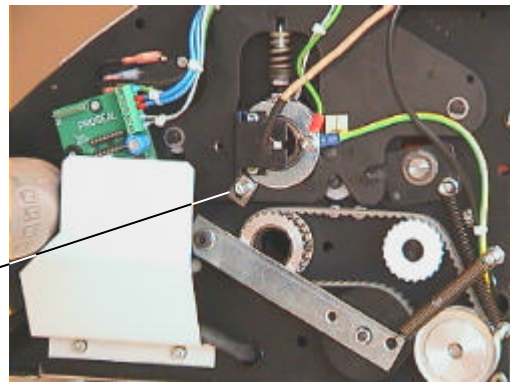


fig. 36

Note:

The figures above show the adjustment strips on the ProSeal 25; the adjustment strips on the ProSeal 44 are positioned **under** the bearing housing, they are larger, and mounted with **two** bolts.

3. Make sure that there is some space between the adjustment strips and the bearing housings, see figure 37.
4. Place the adjustment sheet between the rollers. **Make sure that the sheet covers the bottom roller completely.**



fig. 37

5. Push and rotate the nip setting knob **fully counter-clockwise**, until the pin, mounted in the knob, reaches its **lowest position** in the indent bracket. See figure 38.

The top roller is now applying pressure on the adjustment sheet.

lowest
position

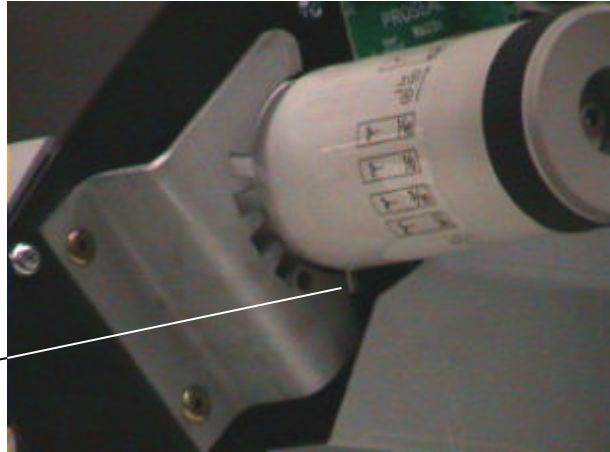


fig. 38

6. Push the adjustment strip **against** the top roller bearing housing. Whilst holding the strip in this position, fasten the M5 bolt(s) firmly using the Allen key 4mm. See figure 39.
7. Perform the previous step at either side of the machine.
8. Open the roller nip again, to remove the adjustment sheet.

push

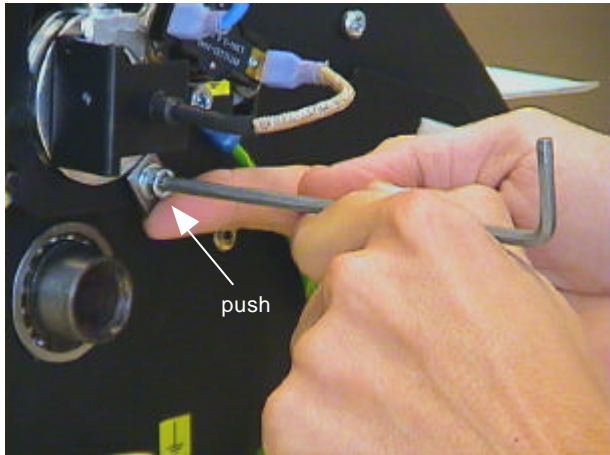


fig. 39

5-3. Temperature Adjustment

Note:

- To perform the following adjustments, it is necessary to remove the right-hand plastic side cover first; see Section 4-3: Disassembly / Reassembly Plastic Side Covers.
- To measure the temperature of the top roller, it is necessary to have the interlocking bolts of the top cover in the unlocked position; see Section 4-1: Opening / Closing the Aluminium Top Cover.

Necessary tools: Infrared Temperature meter, small flat head screwdriver.
Approximate time: 30-60 minutes.

The top roller temperature should be set to 160°C, ± 4°C (320°F, ± 7.5°F).

Changing the temperature to a higher value (in case it is too low) goes faster than the other way around, as the roller is heating up faster than it will cool down. Therefore it is necessary to open the top cover if the roller has to cool down, and wait approx. 15 - 20 minutes to assure that the temperature is well under the correct value.

1. Before taking a temperature measurement, the top cover has to be closed for at least 5 minutes. To do the measurement: open the top cover, and quickly measure the temperature of the top side of the top roller; **close to the middle of the machine.** See figure 40.
2. Close the cover again.
3. To change the temperature setting, insert the screwdriver in the trimpot as shown in figure 41. Rotating clockwise increases the temperature, counter clockwise rotation will decrease the temperature.
4. A five-degree turn of the trimpot will increase/decrease the temperature by approximately 10°C (18°F).
5. Repeat the previous steps if the temperature is not correct.

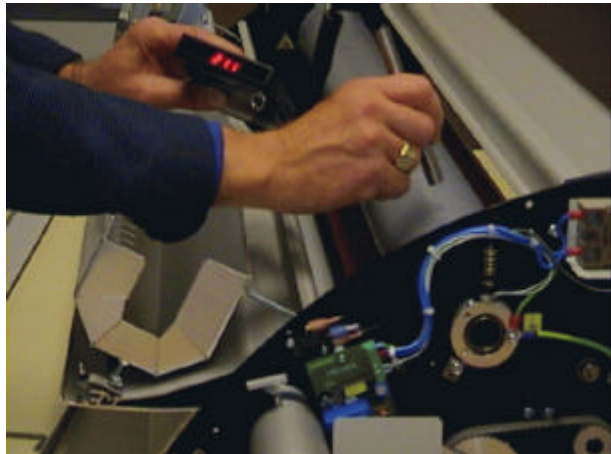


fig. 40

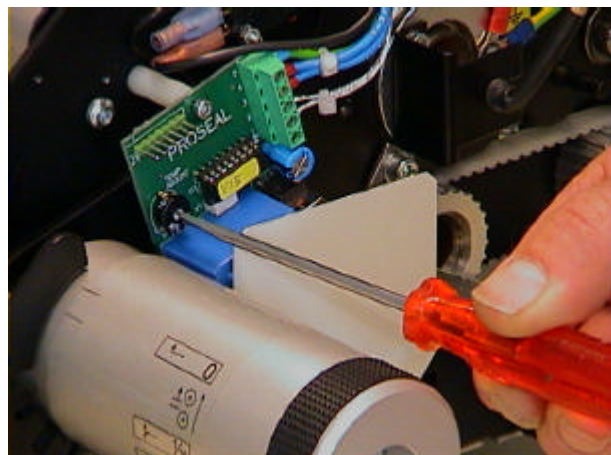


fig. 41

After this adjustment procedure, assemble the right-hand cover again.

**Note:**

Please do not forget to lock the top cover, as the user of the machine is not allowed to open it.

Section 6. Maintenance

6-1. Cleaning of the Machine

The laminator may be cleaned by the operator with a lint-free cloth, lightly dampened with a mild soap and water solution. Spray-on cleaners are not to be used. No part of the machine is to be immersed in water or other liquids.

6-2. Regular Cleaning of the Rollers by the Operator

The laminating rollers of the machine should be periodically cleaned of adhesive build up that might occur during normal operation. This should be performed a few times per day, using the **ProSeal Cleaning Board**.

ProSeal Cleaning Boards are specially designed to attract and capture any adhesive that may be clinging to the rollers. They are made from materials that will not damage or cause excessive wear to the ProSeal Laminator.

1. Turn on the unit and set for Hot Temperature Operation. Once the machine has reached process temperature set the Control Knob to 3/16".
2. Slowly insert the Cleaning Board into the inlet opening. Ensure that the board enters centered and straight. A gentle push may be required to start the board into the machine. Hold the edges of the board until it is engaged in the unit and the laminator begins pulling it on its own.
3. The board will feed through the laminator and automatically exit at the rear of the unit. **THE BOARD WILL BE HOT!** Allow the board to lie flat while cooling.

Note:

This is the only roller cleaning method operators are allowed to do.

6-3. Cleaning of the Rollers by Service Technicians

Only service technicians are allowed to perform a thorough surface maintenance of the rollers. This should be done once or twice per year.

To perform this cleaning procedure, the top cover has to be opened. See Section 4-1 'Opening / Closing the Aluminum Top Cover'. On the ProSeal 44, the feed-in table should be removed as well, see Section 4-2 'Feed-In Table'.

The rollers should be cleaned with a lint-free cloth, lightly dampened with IPA (Isopropanol).



Always be very careful when using IPA! IPA is very flammable! The flash point of IPA is 11°C (51.8°F). The self-ignition temperature is 400°C (752°F). Please make sure that the top roller is cooled down before cleaning.

It's best practice to clean the top roller first; adhesive from the top roller is likely to fall on the bottom roller.

See figure 42: cleaning the top roller, and figure 43: cleaning the bottom roller.



fig. 42

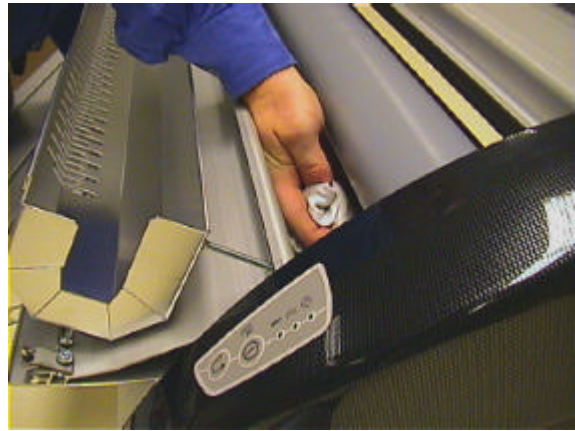


fig. 43

Section 7. Troubleshooting

7-1. Troubleshooting

Problem:

The power LED does not come on, when the nip setting knob has been set to one of the nip settings (board thicknesses).

Causes:

The power cable has not been plugged in the mains wall outlet.

Solution:

Plug the power cable into the mains outlet.

The processor, containing the software, is not installed.

Solution:

Install the software (see Software Installation, Section 4-5).

The processor, containing the software, is installed the wrong way around.

Solution:

Install the software properly (see Software Installation, Section 4-5).

The (external) mains circuit breaker is tripped.

Solution:

Reset the mains circuit breaker.

The flatcable, coming from the control panel in the right hand side cover, and the PCB, is not connected.

Solution:

Perform the Cover Disassembly / Reassembly procedure (See Section 4-3).

The mains (micro) switch is defective.

Solution:

Replace the switch. See Section 8-3-2, Assembly Drawings & Exploded Views, drawing no. 144-180 / 144-182, art. code 961-0007.

Problem:

The heating system LED (middle LED) does not come on, when the nip setting knob has been set to one of the nip settings (board thicknesses), coming from the 'off' position.

Cause:

There is a fault in the controlpanel (if a 'loose' control panel works fine).

Solution:

Replace the right hand cover, containing the control panel. Perform the Cover Disassembly / Reassembly procedure (See Section 4-3).

Problem:

The heating system LED (middle LED) is flashing at a fast rate, instead of being constantly lit.

Cause:

The temperature sensor wires are not connected properly.

Solution:

Check the wires of the sensor.

Problem:

The heating system LED (middle LED) is flashing at a slow rate, instead of being constantly lit.

Cause:

The temperature sensor wires are short-circuited.

Solution:

Check the wires, and replace the sensor if necessary. See Section 8-3-2, Assembly Drawings & Exploded Views, drawing no. 144-184 / 144-186, art. code 144-137 / 144-143.

Problem:

The temperature-ready LED keeps on flashing at a slow rate (after 20 minutes), once the heating has been activated.

Causes:

The heating element is defective, or one of its connectors had not been installed.

Solution:

Check by performing the Heating Element assembly / reassembly procedure (see Section 4-4).

The Solid State Relay is defective (it has a permanent 'open' state; in this case, the red LED on the Solid State Relay is constantly on).

Solution:

Replace the Solid State Relay, see Section 4-1.

The overtemperature switch is defective (it has a permanent 'open' state; in this case, the line voltage can be measured between it's connectors).

Solution:

Replace the overtemperature switch. See Section 8-3-2, Assembly Drawings & Exploded Views, drawing no. 144-185 / 144-187, art. code 961-6003.

The Control PCB is defective (if the previous checks are OK).

Solution:

Replace the Control PCB.

Problem:

The temperature-ready LED starts flashing at a fast rate after some 20 minutes, and continues to do so. The top cover is warmer than usual.

Cause:

The Solid State Relay is defective.

Solution:

Replace the Solid State Relay, see Section 4-1.

Problem:

Pouchboards are not drawn in by the machine, and the motor is making a louder humming noise (it's stalling). Only after pushing very hard, the boards are accepted.

Causes:

The Pouchboard is too thick for the chosen nipsetting.

Solution:

Check the nipsetting that corresponds to the boards used.

Boards of another make are used.

Solution:

Use only ProSeal Pouchboards.

The nip adjustment is not correct.

Solution:

Perform the Nip Adjustment procedure (see Section 3-2).

Problem:

The quality of the lamination is poor: silvery areas on dark surfaces are visible, or the edges of the image are not sealed well.

Causes:

The roller temperature is too low.

Solution:

Perform the Temperature Adjustment procedure (see Section 3-3).

The roller pressure is too low.

Solution:

Perform the Laminating Pressure Adjustment procedure (see Section 3-1).

Problem:

The quality of the lamination is poor: especially laminated inkjet prints show bubbles.

Cause:

The roller temperature is too high.


Solution:

Perform the Temperature Adjustment procedure (see Section 3-3).


Section 8. Diagrams

8-1. Electrical Schematics


8-1-1. Schematic Installation Diagram ProSeal 25 - 110V/60Hz

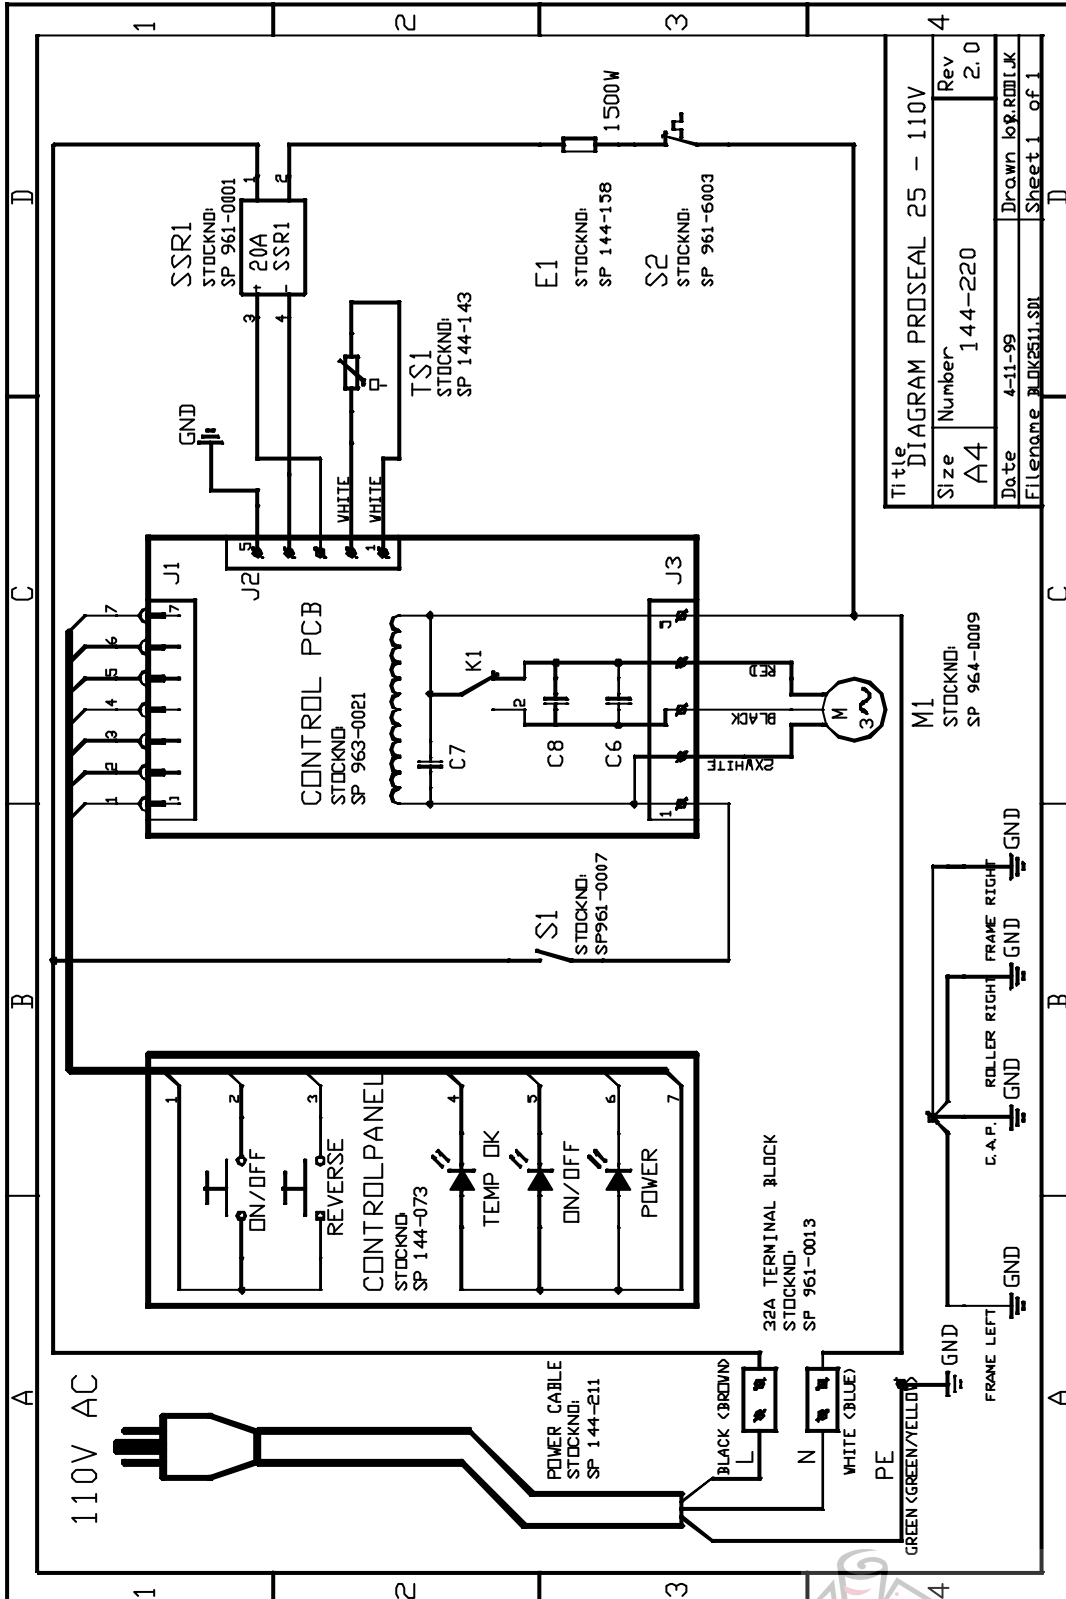


8-1-2. Schematic Installation Diagram ProSeal 44 – 110V/60Hz

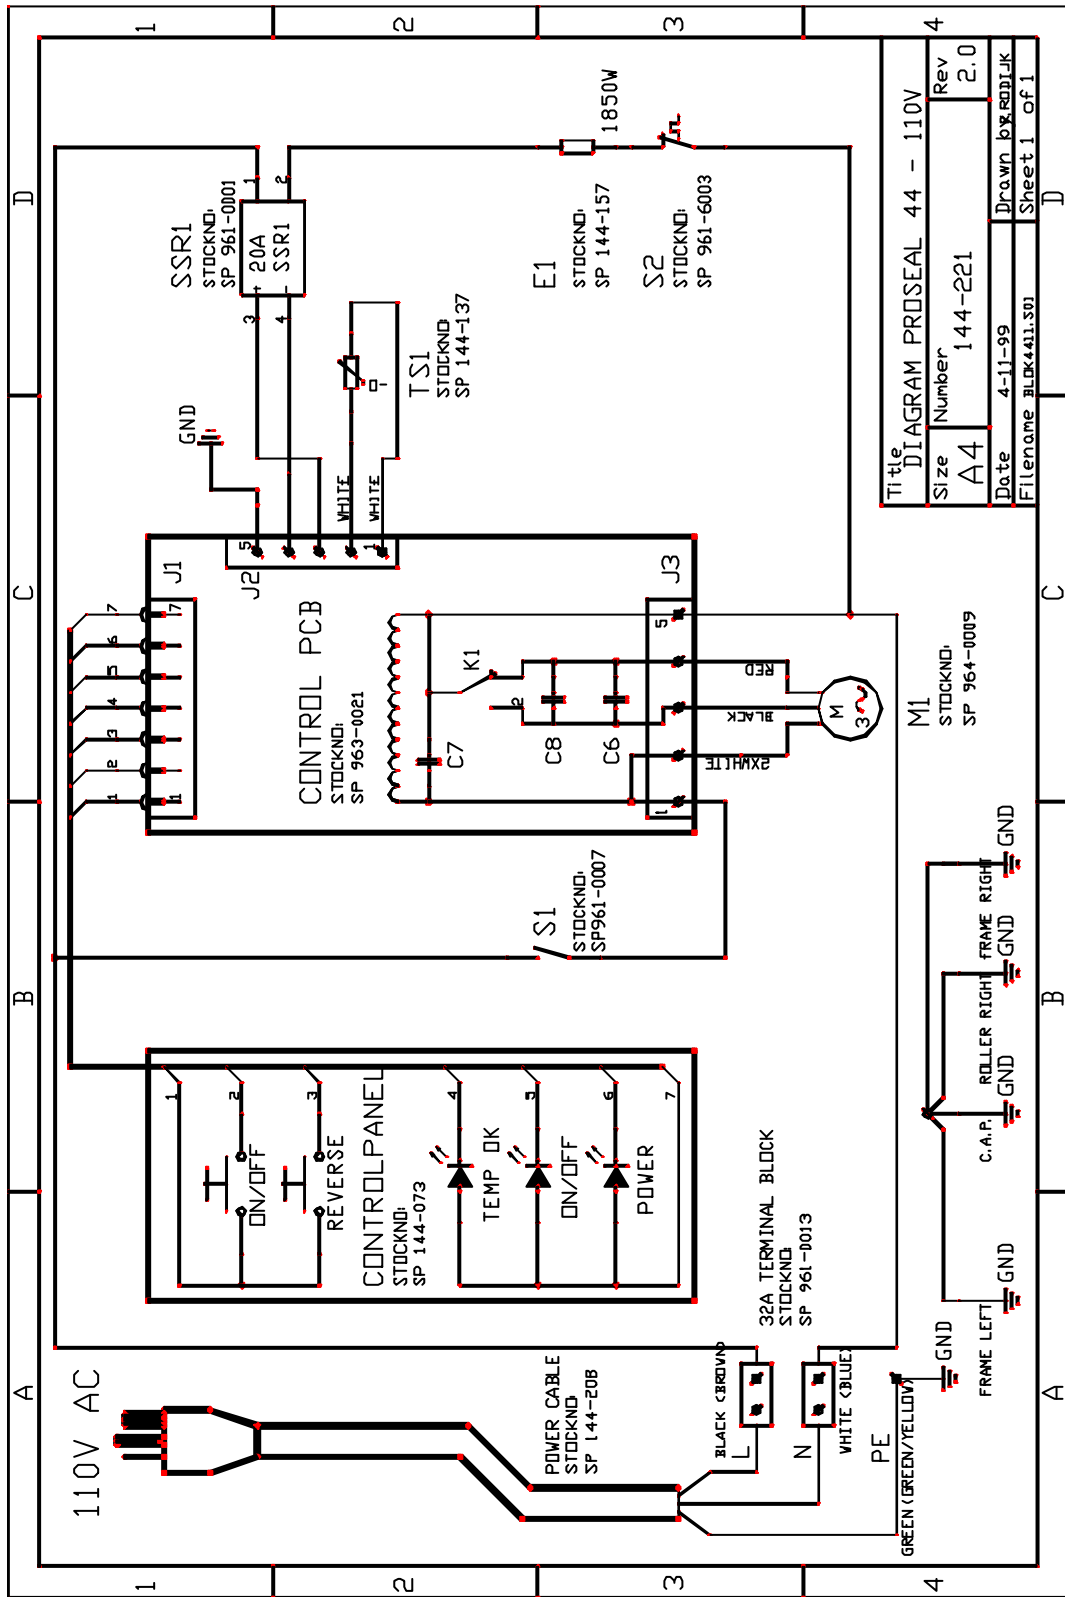


8-1-3. Schematic Diagram Control PCB 110V 50/60Hz

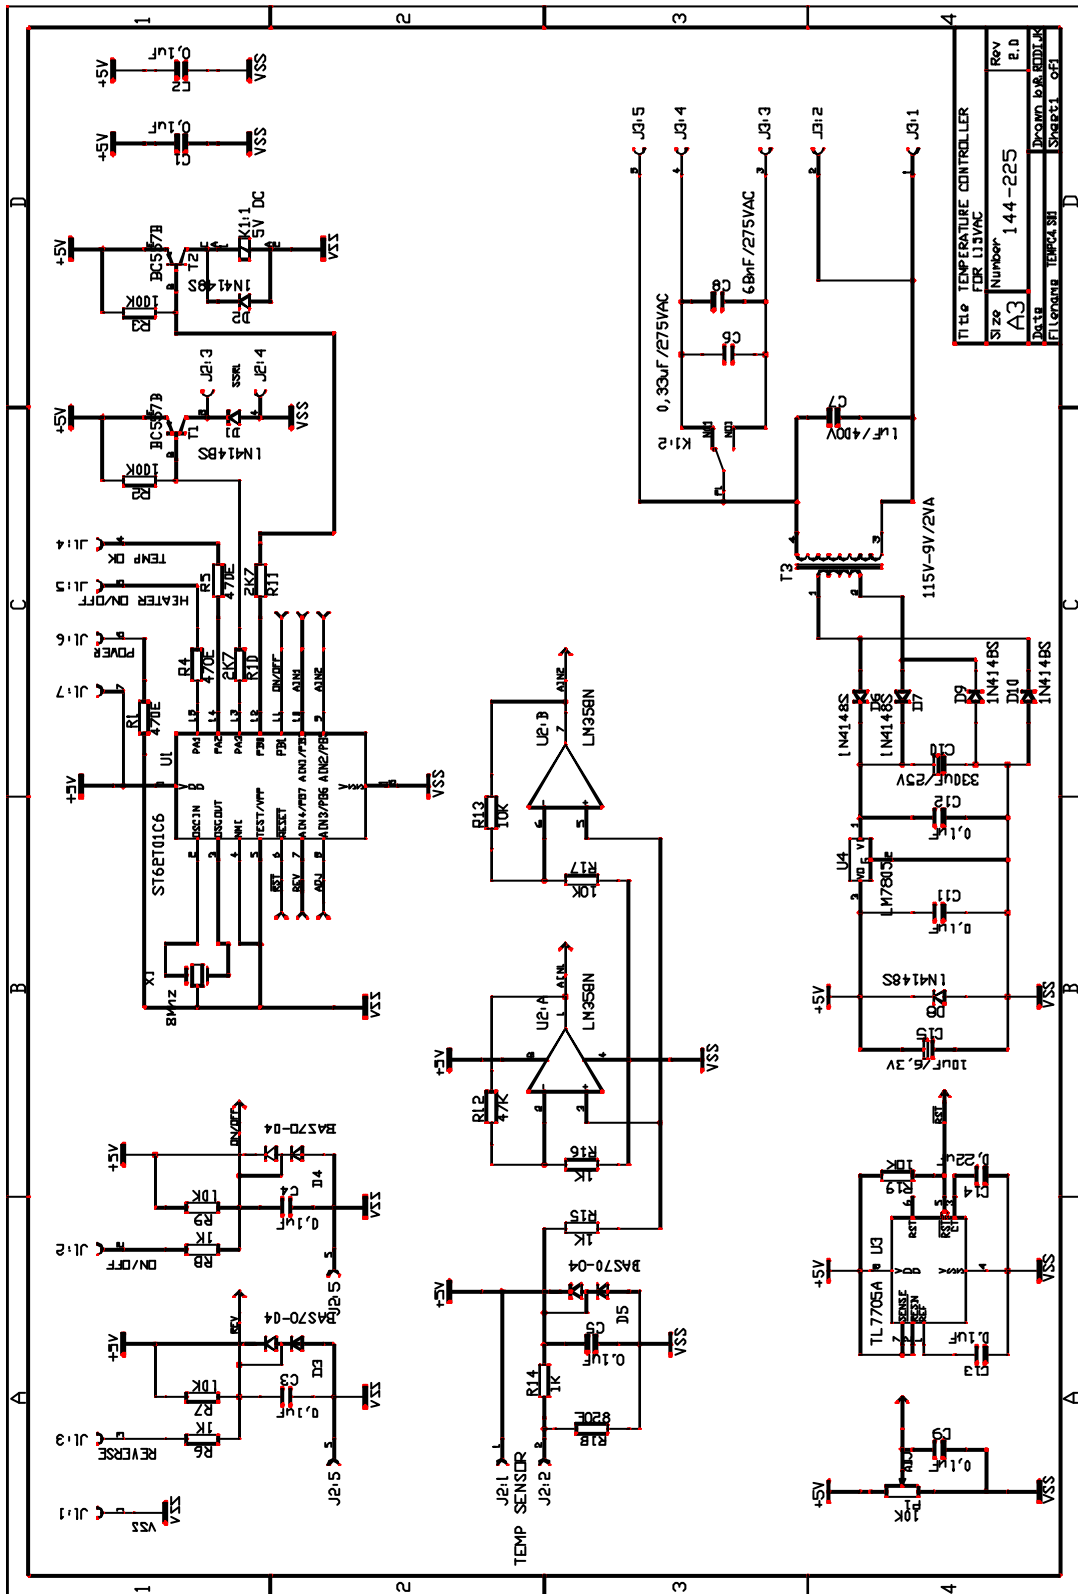


8-1-4. Schematic Diagram Controlpanel

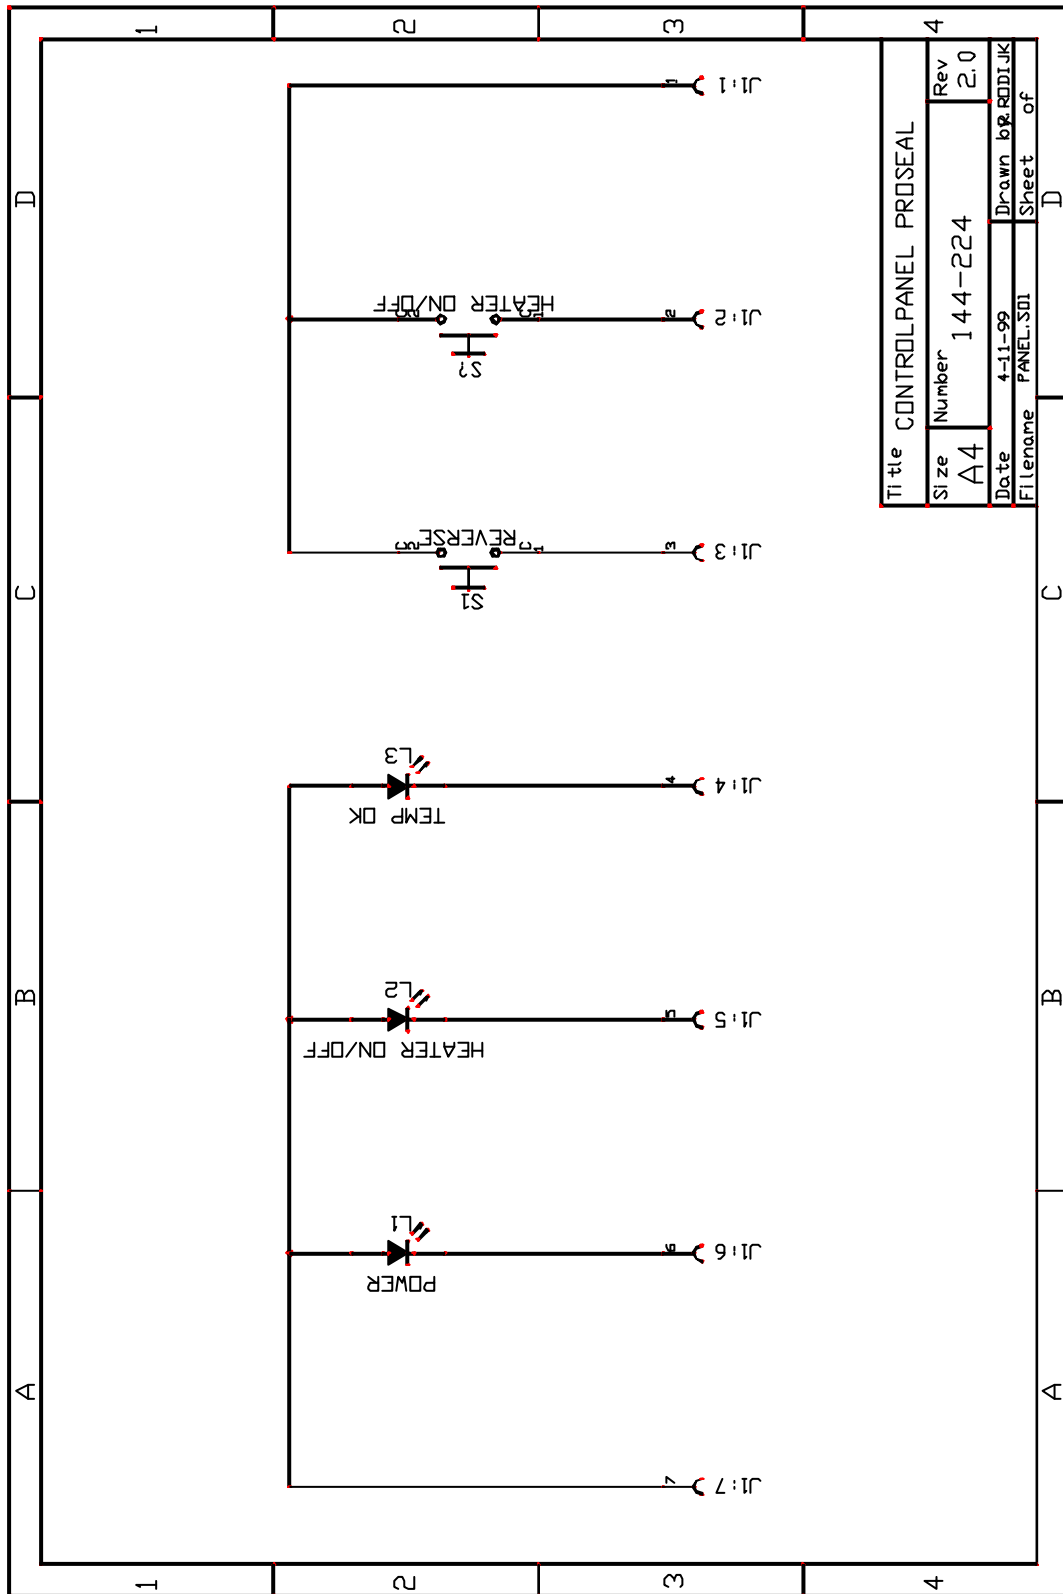

8-1-6. Schematic Installation Diagram ProSeal 44 - 230V/50Hz

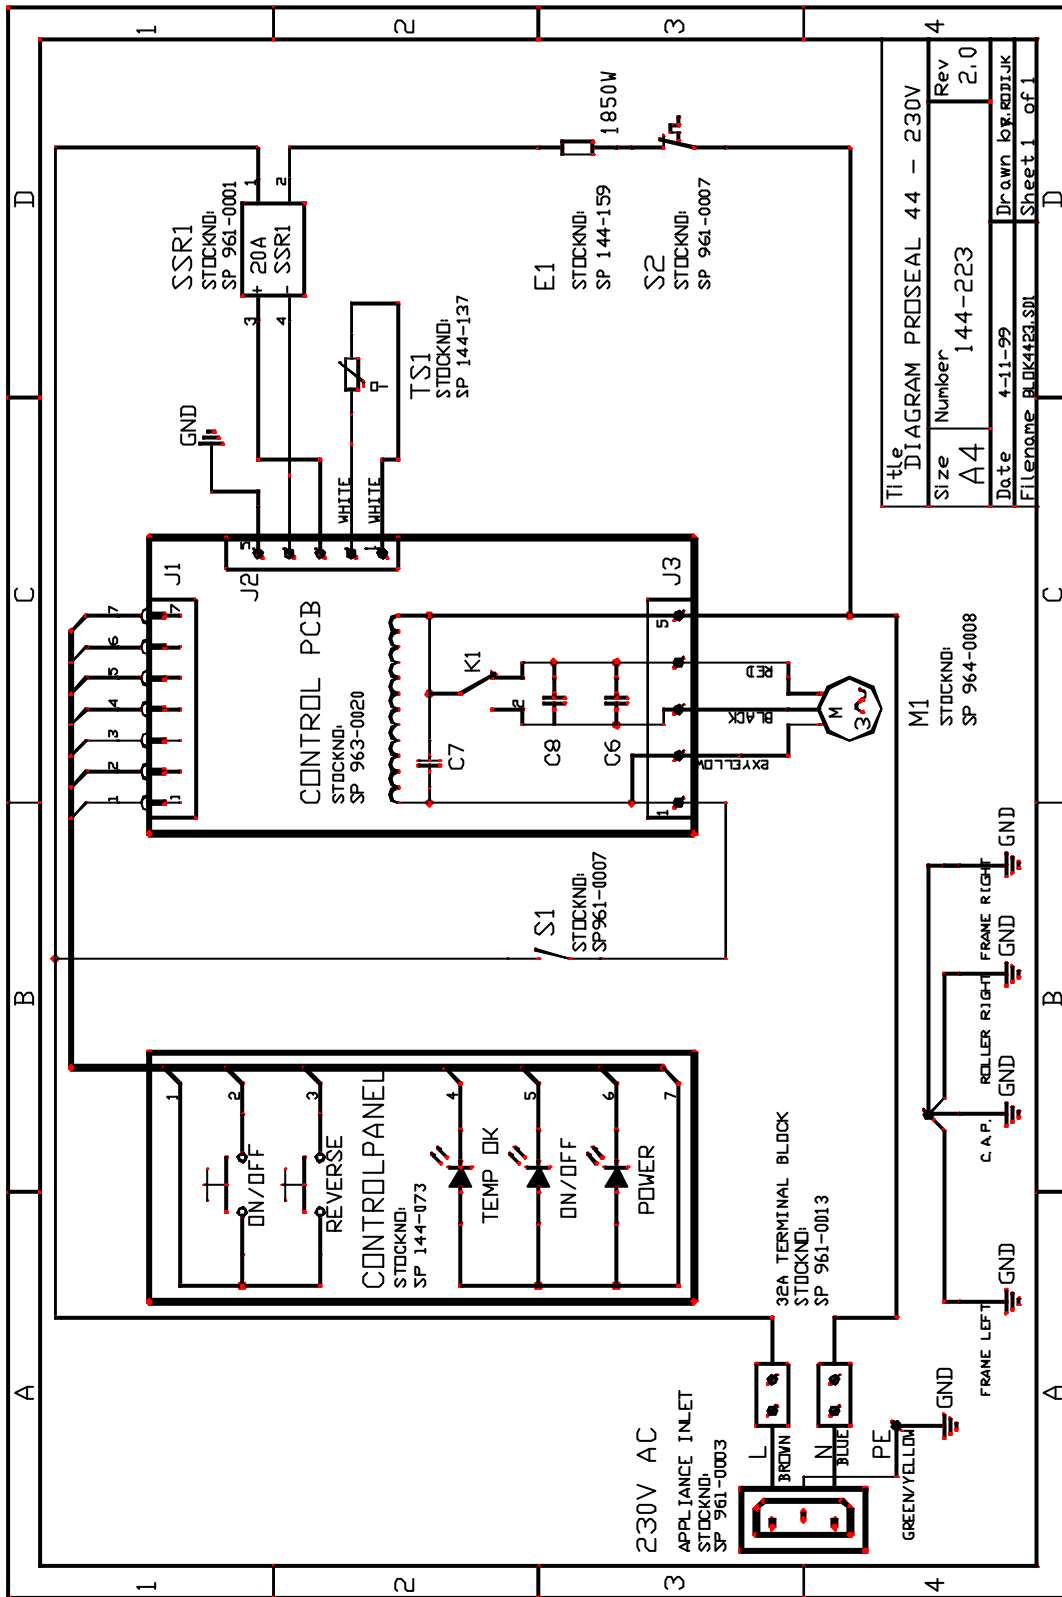

8-1-7. Schematic Diagram Control PCB 230V 50/60Hz

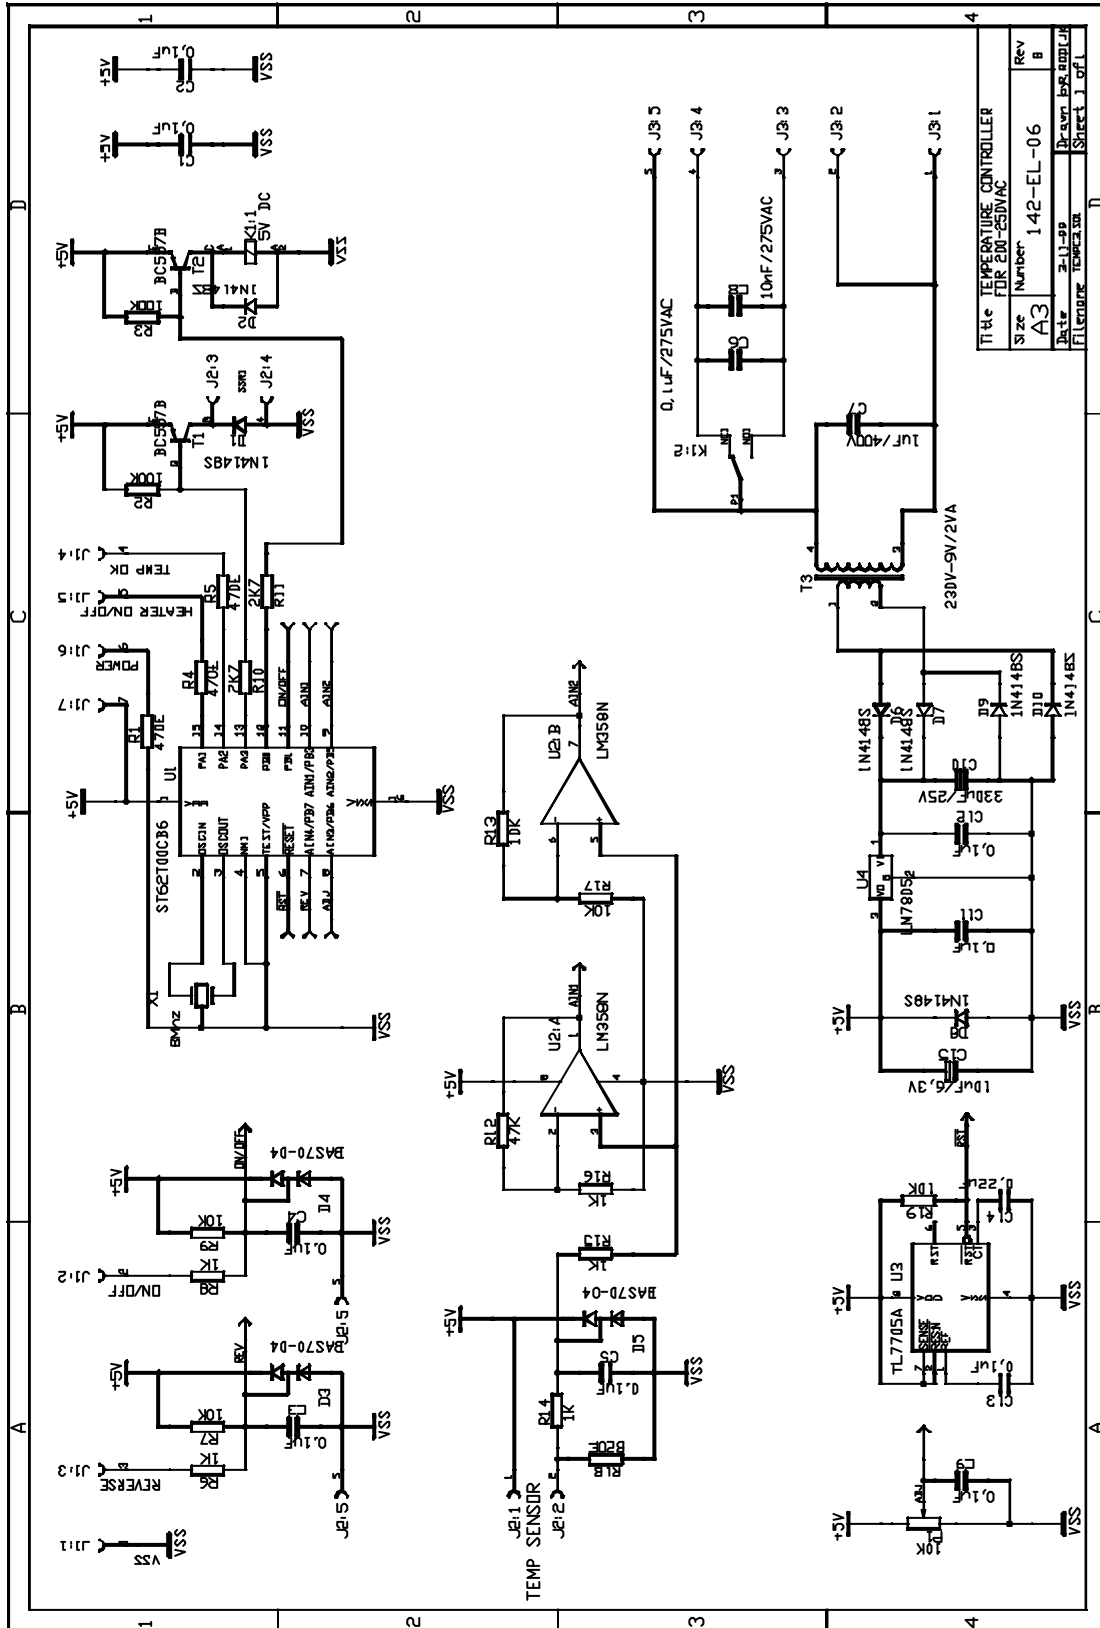

8-2. Certified Electrical Components Lists & Sparepart Codes

8-2-1. 110VAC/60Hz Machines

See also Section 8-1-1 through 8-1-4.

DWG REF	Name	Manufacturer	Type	Technical Details	UL Listing no.	Sparepart no.
SSR1	Solid State Relay	Omron	G3NA-220B	240Vac / 20A	E64562	SP 961-0001
E1	heating element Proseal 25	Quartz Tubing Inc.	144-158	120 Vac /1500W	N.A.	SP 144-158
E1	heating element Proseal 44	Quartz Tubing Inc.	144-157	120Vac /1850W	N.A.	SP 144-157
S1	on/off switch (microswitch)	Omron / Hartmann	V161C5 / MAB6	AC250V /15A AC250V /16A	E32667 / CSA LA 107892-2	SP 961-0007
S2	overtemp switch	Elmwood	2511L135-2040	AC 250V/ 25A	MH8267	SP 961-6003
M1	motor	SAIA-Burgess	UFR1UH 8F33CRN2A	110VAC / 60Hz / 4W	E63316	SP 964-0009
P1	print control pcb 115v ac	Hunt Graphics	963-0021	see underneath	N.A.	SP 963-0021
J2,J3	connector for P1 5 way	Hitaltech	HT255005	Imax=17A5	E167473	N.A.
T1	transformer	Era	BV 030-7293.0S	115V-9V-2VA	E113449	N.A.
K1	relais	Omron	G2R1 5Vdc	250V ac 10A	E41643	N.A.
C6	Capacitor	Philips	33620334	275V ac(X2)	E112471	N.A.
C7	Capacitor	Philips	33620105	275V ac(X2)	E112471	N.A.
C8	Capacitor	Philips	33620683	275V ac(X2)	E112471	N.A.
	terminal block	Farnell	890-390	32 A	E76048	N.A.
	mainplug / cable Proseal 25	Any make	Nema 5 -15P	SJT 3x14AWG	E41542 LL14903	SP 144-211
	mainplug / cable Proseal 44	Any make	Nema 5 -20P	SJT 3x12AWG	E41542 LL14903	SP 144-208
	tri rated internal wiring (black)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	tri rated internal wiring (blue)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	tri rated internal wiring (green/yellow)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	Sleeving	Hellermann Tyton	277-873	10.0 mm	VW-1/Type 3 Class 105T	N.A.
	snap bushing	Heyman	2066	11.1 mm	UL94V-2	SP 961-0005
	nut cable gland	Hugro	587.13.01	polyamid	V-0	SP 961-0012
	coupling nut	Hugro	184.1312.01	polyamid	V-0	SP 961-0011
	plastic ties	Insolok	T18-T30	nylon 66	E23190	N.A.
TS1	temperatue sensor Proseal 25	Precision Engineering Ltd.	N.A.	N.A.	N.A.	SP 144-143
TS1	temperatue sensor Proseal 44	Precision Engineering Ltd.	N.A.	N.A.	N.A.	SP 144-137
P2	controlpanel	De Naamplaat BV	N.A.	N.A.	N.A.	SP 144-073

8-2-2. 230VAC/50Hz Machines

See also Section 8-1-4 through 8-1-7.

DWG REF	Name	Manufacturer	Type	Technical Details	UL Listing no.	Sparepart no.
SSR1	Solid State Relay	Omron	G3NA-220B	240Vac / 20A	E64562	SP 961-0001
E1	heating element Proseal 25	Quartz Tubing Inc.	144-160	230 Vac /1500W	N.A.	SP 144-160
E1	heating element Proseal 44	Quartz Tubing Inc.	144-159	230Vac /1850W	N.A.	SP 144-159
S1	on/off switch (microswitch)	Omron / Hartmann	V161C5 / MAB6	AC250V /15A AC250V /16A	E32667 / CSA LA 107892-2	SP 961-0007
S2	overtemp switch	Elmwood	2511L135-2040	AC 250V/ 25A	MH8267	SP 961-6003
M1	motor	SAIA-Burgess	UFR1ND 5F25CRN2A	230VAC / 50Hz / 4W	N.A.	SP 964-0008
P1	print control PCB 230VAC	Hunt Graphics	963-0020	see underneath	N.A.	SP 963-0020
J2,J3	connector for P1 5 way	Hitaltech	HT255005	Imax=17A5	E167473	N.A.
T1	transformer	Era	BV 030-7305.0S	230V-9V-2VA	E113449	N.A.
K1	relais	Omron	G2R1 5VDC	250V AC 10A	E41643	N.A.
C6	Capacitor	Philips	33620104	275V AC(X2)	E112471	N.A.
C7	Capacitor	Philips	33620105	275V AC(X2)	E112471	N.A.
C8	Capacitor	Philips	33620103	275V ac(X2)	E112471	N.A.
	terminal block	Farnell	890-390	32 A	E76048	N.A.
	appliance inlet	Schurter	6100.43XX	10A / 250VAC	N.A.	SP 961-0003
	power cable UK BS1363A	RS Components	462-418	250VAC 10A	N.A.	SP 961-0017
	power cable EU CEE 7-VII	Feller	VII-H05RRF3 G1.00-C13	250VAC 10A	N.A.	SP 961-0016
	tri rated internal wiring (black)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	tri rated internal wiring (blue)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	tri rated internal wiring (green/yellow)	Multicomp	AWG14 AWG18 AWG22	AWG14 AWG18 AWG22	UL1015	N.A.
	Sleeving	Hellermann Tyton	277-873	10.0 mm	VW-1/Type 3 Class 105T	N.A.
	snap bushing	Heyman	2066	11.1 mm	UL94V-2	SP 961-0005
	plastic ties	Insolok	T18-T30	nylon 66	E23190	N.A.
TS1	temperatue sensor Proseal 25	Precision Engineering Ltd.	TH4075	N.A.	N.A.	SP 144-143
TS1	temperatue sensor Proseal 44	Precision Engineering Ltd.	TH4074	N.A.	N.A.	SP 144-137
P2	controlpanel	De Naamplaat BV	N.A.	N.A.	N.A.	SP 144-073

8-3. Mechanical Spare Parts List, Assembly Drawings & Exploded Views

8-3-1. Mechanical Spare Parts List

Item	Sparepart code	dwg added
assy top roller ProSeal 44"	SP 144-003	Y
assy bottom roller ProSeal 44"	SP 144-004	Y
assy top pull roller ProSeal 44"	SP 144-009	Y
assy nipknob ProSeal 44"	SP 144-021	Y
assy top roller ProSeal 25"	SP 144-026	Y
assy bottom roller ProSeal 25"	SP 144-027	Y
assy bottom pull roller ProSeal 44"	SP 144-046	Y
assy top pull roller ProSeal 25"	SP 144-055	Y
assy bottom pull roller ProSeal 25"	SP 144-070	Y
assy control PCB 230V, 50/60Hz	SP 144-074	N
assy sensor TH4074 (ProSeal 44")	SP 144-137	Y
sticker knob	SP 144-138	N
assy sensor TH4075 (ProSeal 25")	SP 144-143	Y
assy lh cover ProSeal	SP 144-149	Y
assy control PCB 115V, 50/60Hz	SP 144-152	N
heater ProSeal 44"-US 115V / 1850W	SP 144-157	N
heater ProSeal 25"-US 115V / 1500W	SP 144-158	N
heater ProSeal 44"-EU 230V / 1850W	SP 144-159	N
heater ProSeal 25"-EU 230V / 1500W	SP 144-160	N
assy top cover ProSeal 44	SP 144-164	Y
assy top cover ProSeal 25	SP 144-165	Y
assy belt tensioner ProSeal 44"	SP 144-168	Y
sticker 'ProSeal 44'	SP 144-171	N
sticker 'ProSeal 25'	SP 144-172	N
assy rh frame ProSeal 44" - US	SP 144-180	Y
assy lh frame ProSeal 44" - US / EU	SP 144-181	Y
assy rh frame ProSeal 25" - US	SP 144-182	Y
assy lh frame ProSeal 25" - US / EU	SP 144-183	Y
assy rh arm (compl.) ProSeal 44"	SP 144-184	Y
assy lh arm (compl.) ProSeal 44"	SP 144-185	Y
assy rh arm (compl.) ProSeal 25"	SP 144-186	Y
assy lh arm (compl.) ProSeal 25"	SP 144-187	Y
assy top pouch guide PrSI 44"	SP 144-188	Y
assy top pouch guide PrSI 25"	SP 144-189	Y
assy rh arm pull roller (compl.)	SP 144-190	Y
assy lh arm pull roller (compl.)	SP 144-191	Y
assy rh cover (compl.) ProSeal	SP 144-194	Y
assy nipknob ProSeal 25"	SP 144-195	Y
assy lh interlock top cover	SP 144-198	Y
assy rh frame ProSeal 44" - EU	SP 144-201	Y
assy lh frame ProSeal 25" - EU	SP 144-202	Y
assy rh interlock top cover	SP 144-204	Y
assy rear sheet ProSeal 44" -US	SP 144-206	Y
assy US Power Cable 20A	SP 144-208	Y
assy rear sheet ProSeal 25" - US	SP 144-210	Y
assy US Power Cable 15A	SP 144-211	Y
assy feed-in table ProSeal 25'	SP 144-230	Y
assy feed-in table ProSeal 44"	SP 144-231	Y
assy rear sheet ProSeal 44" - EU	SP 144-234	Y
assy rear sheet ProSeal 25" - EU	SP 144-235	Y
assy belt tensioner ProSeal 25" - EU	SP 144-237	Y
drive belt ProSeal 44	SP 956-0002	N
drive belt ProSeal 25	SP 956-0003	N
machine foot	SP 957-0000	N

8-3-2. Assembly Drawings & Exploded Views

The next pages contain assembly drawings and exploded views.

We Have it All...



MyBinding.com

When Image Matters.

Guaranteed Lowest Prices on an
Endless Selection of Binding Systems, Laminators,
Paper Shredders, Supplies and Accessories.

We have you covered with Expert Advice
and Support. Our popular blog keeps you up to
date on the latest tips and techniques to make
your most important binding and laminating
tasks a success.

Call Us Today

1-800-944-4573

Our Trusted Partners

GBC / Ibico
Fellowes
Powis Fastback
Unibind
Akiles
Renz
Tamerica
Rhin-O-Tuff
DFG

Pro-Bind
Martin Yale
MBM
Formax
Intimus
Dahle
HSM
Standard
Xyron

Challenge
Lasko-Wizer
GBC Shredmaster
Avery
Wilson Jones
Cardinal
Samsill
Universal



- BINDING MACHINES
- BINDING SUPPLIES
- LAMINATORS
- I.D. ACCESSORIES
- BOARDS & EASELS
- PAPER SHREDDERS
- XYRON LAMINATORS
- COIL BINDING MACHINES
- UNIBIND BINDING MACHINES
- FASTBACK BINDING EQUIPMENT
- PAPER FOLDING MACHINES
- LAMINATING POUCHES
- ROTARY TRIMMERS
- CLEAR COVERS
- TWIN LOOP WIRE
- REGENCY COVERS
- PLASTIC BINDING COVERS
- VELOBIND BINDING MACHINES
- PAPER HANDLING EQUIPMENT
- THERMAL BINDING MACHINES
- PROCLICK BINDING SYSTEMS
- COMB BINDING MACHINES
- COMB BINDING SUPPLIES
- WIRE BINDING MACHINES
- POUCH LAMINATORS
- LAMINATING ROLLS
- 3-RING BINDERS
- ROLL LAMINATORS
- VELOBIND SPINES
- PAPER CUTTERS
- PAPER JOGGERS
- LETTER OPENERS
- THERMAL COVERS
- UNIBIND SUPPLIES
- PROCLICK SPINES
- ZIPBIND SPINES
- LINEN COVERS
- SPIRAL COIL
- INDEX TABS